HA20PX - HA61JRT - HA260PX - HA80JRT

Operator's manual

HA20PX - HA61JRT

HA260PX - HA80JRT

4000351200 E 05.16 USA / GB

CONTENTS

A

FOREWORD

1 - User responsibility 8
1.1 - Owner's responsibility. 8
1.2 - Employer's responsibility. 8
1.3 - Trainer's responsibility 8
1.4 - Operator's responsibility. 9
2 - Safety 10
2.1 - Safety instructions. 10
2.1.1 - Misuse Hazards 10
2.1.2 - Falling Hazards. 11
2.1.3 - Overturning / Tip-over Hazards 12
2.1.4 - Electrocution Hazards. 15
2.1.5 - Explosion / Fire Hazards. 16
2.1.6 - Crushing / Collision Hazards 16
2.1.7 - Uncontrolled movement Hazards 17
3 - Safety inquiries 18
4 - Incident notification 18
5 - Compliance 19
5.1 - Product information. 19
5.1.1 - Change of Ownership Notification 19
5.1.2 - Owner information update form 20
5.2 - Product specifications. 21

B

FAMILIARIZATION

1 - General safety 23
1.1 - Intended use 23
1.2 - Decal content. 24
1.3 - Symbols and colors 25
1.4 - Level of severity. 25
1.5 - Symbols legend and definitions. 26
2 - Models description 27
3 - Primary machine components. 28
3.1 - Layout 28
3.2 - Ground control box. 30
3.2.1 - Layout. 30
3.3 - Platform control box 32
3.3.1 - Layout. 32
4 - Performance Specifications. 35
4.1 - Technical characteristics. 35
4.2 - Working area / Range of motion. 37
5 - Decals and markings locations HA20PX - HA61JRT - HA260PX - HA80JRT. 40

C

PRE-OPERATION INSPECTION

1 - Recommendations 51
2 - Working area assessment 52
3 - Inspection and Functional test 53
3.1 - Daily inspection 53
4 - Safety functional checks 57
4.1 - E-Stop button check 57
4.2 - Activation of controls 57
4.3 - Fault detector 58
4.3.1 - Buzzers test 58
4.4 - Automatic engine cut-out 58
4.5 - Overload sensing system (if fitted) 58
4.6 - Slope warning device 59
4.7 - Travel speed limitation 59
4.8 - Length and angle sensors 60
4.9 - On-board electronics 60
4.10 - Operating temperature (For Russia and the Ukraine only) 60
4.11 - Radius limitation 61
4.12 - Drive buzzer 61
4.13 - Manual pre-heating 61

D

OPERATION INSTRUCTIONS

1 - Operation 63
1.1 - Introduction 63
1.2 - Operation from the ground control box 63
1.3 - Operation from the platform control box 65
1.4 - Operation of overriding system from ground control box 65
2 - Ground control box 66
2.1 - To start the machine from the ground control box 66
2.2 - Boom and arm controls 67
2.3 - Additional controls from the ground control box 68
3 - Platform control box 69
3.1 - To start and stop the machine 69
3.2 - Drive and steer control 70
3.3 - Boom and arm controls 71
4 - Emergency procedure 73
4.1 - In case of power loss 73
4.2 - To rescue operator in platform 74
4.3 - No power available 75

CONTENTS

5 - Transportation 76
5.1 - Putting in transport position 76
5.2 - Machine layout 77
5.3 - Unloading 78
5.4 - Towing 79
5.4.1 - Disengaging the drive hubs 79
5.4.2 - Re-engaging the drive hubs 80
5.5 - Storage 80
5.6 - Lifting operation 81
5.6.1 - Safety precautions 81
5.6.2 - Necessary equipment 81
5.6.3 - Preliminary procedures 82
5.6.4 - Procedure for the use of slings 83
6 - Cold Weather Recommendations 86
6.1 - Engine oil 86
6.2 - Hydraulic oil 87
6.3 - Preheating operation 87

E

GENERAL SPECIFICATIONS

1 - Machine dimensions 90
2 - Major component masses 92
3 - Acoustics and vibrations 92
4 - Wheel/Tire assembly 93
4.1 - Technical specifications 93
4.2 - Inspection and maintenance 93
5 - Options 95
5.1 - On-board generator 95
5.1.1 - Principle 95
5.1.2 - Procedure 95
5.2 - Activ' Shield Bar - SECONDARY GUARDING SYSTEM 96
5.2.1 - Description 96
5.2.2 - Characteristics 96
5.2.3 - Safety precautions 97
5.2.4 - Pre-operation inspection 98
5.2.5 - Operation 100
5.2.6 - Specific decals 101

F

MAINTENANCE

1 - General 103
2 - Maintenance Schedule 104
3 - Inspection program 105
3.1 - General program 105
3.2 - Daily inspection 105
3.3 - Periodic inspection 106
3.4 - Reinforced inspection 106
3.5 - Major inspection 106
4 - Repairs and adjustments 107

G

OTHER INFORMATION

1 - Warranty disclosure 109
1.1 - After Sales Service 109
1.2 - Manufacturer's warranty. 109
1.2.1 - Warranty acceptance 109
1.2.2 - Warranty period 109
1.2.3 - Procedure conditions 109
1.2.4 - Conditions of warranty 110
2 - Subsidiary contact information. 112

A - Foreword

You have just purchased a HAULOTTE® product and we would like to thank you for your business.

The Aerial Work Platform is a mechanical device primarily designed and manufactured with the intent to position people with the necessary tools and material to overhead elevated temporary workplaces. All other uses or alterations/modifications to the aerial work platform must be approved by HAULOTTE®.

This manual shall be considered a permanent component of the machine and shall be kept with the aerial work platform in the designated Manual Holder, at all times.

Safe operation of this product can only be assured if you follow the operating instructions contained in this manual. To ensure proper and safe use of this equipment, it is strongly recommended that only trained and authorized personnel operate and maintain the aerial work platform.

We would particularly like to draw your attention to 2 essential points :

- Comply with safety instructions.
- Use the equipment within the specified/published performance limits.

With regard to the designation of our equipment, we stress that this is purely for commercial purposes and not to be confused with the technical specifications. Only the specifications in this manual should be used to study the suitability of the equipment for the intended use.

This operator's manual is specific to the HAULOTTE® products listed on the cover page of this manual.

Original language and version :

Manuals in English and French are the original instructions. Manuals in other languages are translations of the original instructions.

The operator's manual does not replace the basic training required for equipment operators. HAULOTTE® has compiled this manual to assist in safe and efficient operation of the products covered in the manual.

The manual must be available to all operators and must be kept in a legible condition. Additional copies can be ordered from HAULOTTE Services®.

Stay Safe and keep working with HAULOTTE® !

1 - User responsibility

1.1 - OWNER'S RESPONSIBILITY

The owner (or hirer) has the obligation :

- To inform operators of the instructions contained in the Operator's Manual.
- For applying the local regulations regarding operation of the machine.
- To replace all manuals or decals that are either missing or not legible. Additional copies can be ordered from HAULOTTE Services®.
- To establish a preventive maintenance program in accordance with the manufacturer's recommendations, taking into account the environment and severity of use of the machine.
- To perform periodic inspections in accordance with HAULOTTE® recommendations and local regulations.

All malfunctions and problems identified during the inspection shall be corrected before the aerial work platform is returned to service.

1.2 - EMPLOYER'S RESPONSIBILITY

The employer has the obligation :

- To authorize the operator to use the machine.
- To inform and familiarize the operator with the local regulations.

Forbid anyone from operating the machine if :

- Under the influence of drugs, alcohol, etc.
- Subject to fits, loss of motor skills, dizziness, etc.

1.3 - TRAINER'S RESPONSIBILITY

The trainer must be qualified to provide training to operators in accordance with applicable local regulations. The training must be given in an obstacle-free area until the trainee is considered competent as defined by the training program undertaken.

1.4 - OPERATOR'S RESPONSIBILITY

The operator has the obligation to :

- Read and understand the contents of this manual and familiarize himself with the decals affixed on the machine.
- To inspect the machine before use according to HAULOTTE®'s recommendations..
- To inform the owner (or hirer) if the manual or any decals are missing or are not legible.
- To inform of any malfunctioning of the machine.

The operator shall ensure that frequent inspections were conducted by the owners and the operator may only operate the machine for the purpose intended by the manufacturer.

Only authorized and qualified operators may operate HAULOTTE® machines.

All operators must become familiar with and fully understand the emergency controls and be able to operate the machine in an emergency.

The operator has the obligation to stop using the machine in the event of malfunction or safety problems on the machine or in the work area and report the problem immediately to his/her supervisor.

2 - Safety

2.1 - SAFETY INSTRUCTIONS

2.1.1 - Misuse Hazards

- Do not use the machine for any other purpose than to position people, their tools and material to the overhead/elevated temporary work places.
- Do not use the machine as a crane, material lift or elevator. Only use the machine as it was intended.
- Do not attach overhanging loads when raising or lowering the platform.
- Do not tie the boom or platform to an adjacent fixed or mobile structure.
- Do not use/operate the machine when alone. A survey person or immediate Supervisor must be present on the ground in case of emergency.
- Do not use a faulty or poorly maintained machine. Remove defective/damaged machine from service.
- Do not climb onto the compartment covers of the machine.
- Do not replace items critical to machine stability with items of different weight or specification.
- Do not replace factory-installed tires with tires of different specifications or ply rating.
- Do not alter or disable machine components that in any way affect safety and stability.
- Do not disable the safety devices.

2.1.2 - Falling Hazards

To enter or exit from the platform :

- The machine must be completely stowed.
- Face the machine to access the entry opening to the platform.
- Keep 3 points of contact (both hands and a foot) on the steps and the guardrail.

Before commencing operation :

- Ensure that guard rails are correctly installed and secured.
- Ensure that gate or sliding bar is in it's proper closed position.
- Remove oil or grease from the steps, floor, handrail and the guardrails.
- Clear the platform floor free of debris.

When in the platform :

- Occupants must wear a fall arrest harness, with lanyard and energy absorber in accordance with governmental regulations. Use a fall arrest harness adjusted to your size that has been inspected by a competent person.
- The correct use of the harness requires the lanyard to be connected to an anchorage point designated by the decals. Refer to this decal located on the platform.
- Hold on securely to the guardrails.

- Always keep your feet firmly on the floor of the platform.
- Do not sit, stand, or climb on the platform guard rails.
- Work only within the platform guardrails area and do not lean over guardrails to perform work.
- Do not exit the platform until it is in the completely stowed position.
- Do not use the guardrail as a means of access to climb in or out of the platform.

2.1.3 - Overturning / Tip-over Hazards

Before positioning and operating the machine :

- Ensure that the surface is capable of supporting the machine weight including the rated capacity.
- Do not exceed the maximum rated capacity that includes the weight of both material and allowed number of occupants. Do not exceed the allowable number of occupants.

- Place the loads uniformly distributed on the platform floor.
- Do not increase the working height (using extensions, ladder, etc.).
- Do not place ladders or scaffolds in the platform or against any part of this machine.
- Do not use the machine in winds exceeding the permissible limit.

- Do not increase the surface area of the platform exposed to wind. This includes adding panels, mesh, banners. Be aware when working with materials with a large surface area. This will add to the wind load on the machine.
- Do not raise the platform or drive with platform elevated on an incline exceeding the rated slope for the machine.
- Do not drive the machine on slopes or grades exceeding the specified limits.

- Do not replace components critical to stability with components of different weight or specification.
- Do not use the machine with material or objects hanging from the guardrail or the boom.
- Do not pull or push towards any object outside of the platform. Do not exceed the maximum allowable side force stated in the performance specifications.

- Do not use the machine to support any external structure.
- Do not use the machine to tow other machines or to drag materials.

Using a machine on a slope

Do not exceed the slope limit for each operation. Section B 4.1Technical specifications.

Gradeability :

- Driving in stowed position UP or DOWN a slope.

Rated slope :

- Operating with platform elevated.

- If the tilt alarm sounds with the platform uphill : First lower the boom and then retract the boom.
- If the tilt alarm sounds with the platform facing downhill : First retract the boom and then lower the boom.
- While driving, always place the boom above the rear axle, in the direction of movement.
- While driving on a slope:
  - Always orientate the machine in the direction of the slope.
  - Always place the boom and the arms in fully retracted and in stowed position.
  - Do not travel down slopes in high speed.
  - Do not drive fast in narrow or cluttered areas. Keep speed under control while making turns or sharp bends.

WIND : The aerial work platform can operate up to a maximum wind speed as indicated in the specifications. To identify the local wind speed, use the Beaufort scale below, use a wind gauge or an anemometer.

A - Foreword

***N.B.**-:-The Beaufort scale of wind force is accepted internationally and is used when communicating weather conditions. A wind speed range at 10 m (32 ft 9 in) above flat, clear land is associated with each degree.*

Beaufort scale

Force	Meteorological description	Observed effects	m/s	km/h	mph
0	Calm	Smoke rises vertically.	0 - 0,2	0 - 1	0 - 0,62
1	Very light breeze	Smoke indicates the wind direction.	0,3 - 1,5	1 - 5	0,62 - 3,11
2	Light breeze	Wind felt on the face. Leaves rustle. Weather vanes turn.	1,6 - 3,3	6 - 11	3,72 - 6,84
3	Slight breeze	Leaves and small twigs in constant motion. Flags move slightly.	3,4 - 5,4	12 - 19	7,46 - 11,8
4	Nice breeze	Raised dust and loose papers. Small branches are moved.	5,5 - 7,9	20 - 28	12,43 - 17,4
5	Nice breeze	Small trees in leaf to sway. Crested wavelets form on inland waterways.	8,0 - 10,7	29 - 38	18,02 - 23,6
6	Cool wind	Large branches in motion. Power lines and chimneys 'sing'. Umbrellas used with difficulty.	10,8 - 13,8	39 - 49	24,23 - 30,45
7	Near gale	Whole trees in motion. Inconvenience felt when walking against wind.	13,9 - 17,1	50 - 61	31 - 37,9
8	Squall	Some branches break. Generally we cannot walk against the wind.	17,2 - 20,7	62 - 74	38,53 - 45,98
9	Strong squall	The wind causes slight damage to buildings. Tiles and chimney stacks are blown off.	20,8 - 24,4	75 - 88	46,60 - 54,68

2.1.4 - Electrocution Hazards

The machine is not electrically insulated and does not provide protection from contact or proximity to electrically charged conductors.

Always position the lift at a safe distance from electrically charged conductors to ensure that no part of the machine is within an unsafe area.

Respect the local rules and the minimum safety distance from power lines.

Minimum safe approach distances

Electric voltage	Minimum safety distance	
	Mètre	Feet
0 - 300 V	Avoid contact	
300 V - 50 kV	3	10
50 - 200 kV	5	15
200 - 350 kV	6	20
350 - 500 kV	8	25
500 - 750 kV	11	35
750 - 1000 kV	14	45

***N.B.**-:-Use this table except where local regulations indicate otherwise.*

- Do not operate the machine when close to live power lines, consider the movement of the machine and the sway of the electric power lines particularly in windy conditions.
- Do not operate the machine during lightning, thunderstorms, snow/ice or any weather condition that could compromise operator safety.
- Do not use the machine as a ground for welding.
- Do not weld on the machine without first disconnecting the battery terminals.
- Always disconnect ground cable first.
- The machine must not be used while charging the batteries.
- When using the platform AC power supply, ensure it is protected with a circuit breaker and residual current device.

Keep away from the machine if it contacts energized power lines. Personnel on the ground or in the platform must not touch or operate the machine until energized power lines are shut off.

2.1.5 - Explosion / Fire Hazards

Always wear protective clothing and eye wear when working with batteries and power sources/systems.

N.B.-:-*Acid is neutralized with sodium bicarbonate and water.*

- Do not start the engine if you smell or detect liquid propane gas (LPG), gasoline, diesel fuel or other explosive substances.
- Do not work on or operate a machine in an explosive or flammable atmosphere / environment.
- Do not touch hot components.
- Do not bridge the battery terminals with metallic objects.
- Do not service the battery in proximity of spark, open flame, lit cigarettes.
- Do not fill up the fuel tank, when the engine is running and/or near a flame.

2.1.6 - Crushing / Collision Hazards

When in the platform :

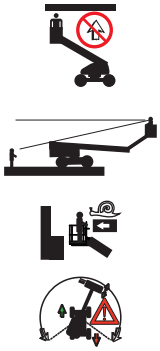

- Check the work area for overhead clearance, for any obstacles besides and below the platform when raising/lowering the platform and or before driving.
- During movement, keep all the parts of the body inside the platform. Hold onto the guardrails on the opposite side to any surrounding structures. Take care to avoid trapping hands whilst holding the guardrails.
- To position machine close to a building/structure, it is recommended using the upper boom and or arms movement control functions to position, rather than driving machine closer to structure.
- Always cordon off the area around the base of the machine to keep personnel and other equipment away from the machine while in use.
- Warn personnel not to work, stand, or walk under a raised boom/platform.
- Do not drive in reverse direction (opposite the field of vision).
- Be aware of the boom position and tail swing when rotating the turret (turntable).
- Always ensure that the chassis is never driven any closer than 1 m (3 ft 3 in) to holes, bumps, slopes, obstructions, debris and ground coverings that may hide holes and other dangers.
- Keep non-operating personnel at least 5 m (16 ft 5 in) away from the machine when driving and slewing.
- Be aware of driving direction.
- When turret is slewed/rotated 180°, the platform is now facing the rear of the machine.
- Check the driving direction with the help of the red or green arrow on the chassis relative to the red and green arrows on the platform control box.
- Also note that when changing the driving direction (Forward <> Reverse) the joysticks or switches must return to the neutral position before reversing the drive direction and for movement to occur.

- When driving, position the platform so as to provide the best possible visibility and to avoid any blind spots.
- Hold on securely to the guardrails.
- Occupants must wear a fall arrest harness, with lanyard and energy absorber in accordance with governmental regulations. Use a fall arrest harness adjusted to your size that has been inspected by a competent person.
- Lanyard must be attached to the designated anchorage point.
- Avoid contact with fixed or mobile obstacles (other machines).
- Other machines (crane, aerial work platform, etc.) operating in the work area increase the risk of crushing or collision. Restrict the operation of machines moving within the aerial work platform work area.
- Take into consideration the stopping distance, reduced visibility and blind spots of the machine.
- Limit travel speed to suit the ground surface condition, slope (incline), and people in the vicinity.

2.1.7 - Uncontrolled movement Hazards

Do not use a damaged or malfunctioning machine.

Be aware of uncontrolled movement and always respect the following :

- Maintain clearance from high voltage lines.
- Maintain clearance from generators, radar, electromagnetic fields.
- Never expose the batteries or electrical components to water (high pressure washer, rain).
- Never tow the machine over extended distances.
- In case of a machine breakdown, it is possible to tow short distance to load it onto a trailer.
- Never leave the hydraulic cylinders fully extended before switching off the machine, or when stationary for an extended period of time.
- Retract the boom and lower the arms to the stowed position.
- Rotate the turntable so that the boom is between the non-steering wheels.
- Select a safe parking location, on a firm level surface, clear of obstruction and traffic.
- Ensure all compartments are closed and secured.
- Chock the wheels.
- Operator must remove the foot from the footswitch when any movement has ceased.

3 - Safety inquiries

Inquiries relating to design criteria/specifications of a product, standards compliance, or overall machine safety should be sent to the HAULOTTE® PRODUCT SAFETY department.

Each inquiry or request should include all relevant information; including contact name, telephone number, mailing address, email address, plus the machine model and serial number.

The HAULOTTE® Product Safety department will evaluate each request/inquiry and will provide a written response.

4 - Incident notification

Notify HAULOTTE® immediately when a HAULOTTE® product has been involved in an incident/ accident leading to personal injury or death, or when there is a major property damage.

HAULOTTE Group - EUROPE Product Safety Department Address : La Péronnière - BP 9 - 42152 L'Horme - France Tel : +33 (0)4 77 29 24 24 Email : ProductSafety@haulotte.com	HAULOTTE Group - Australia, India and Asia Product Safety Department Address : No.26 Changi North Way - Sinpapore 498812 - Singapore Tel : +65 6546 6150 Email : ProductSafety@haulotte.com	HAULOTTE Group - North & South America Product Safety Department Address : 3409 Chandler Creek Rd. - Virginia Beach, VA 23453 - United States Tel : +1 757 689 2146 Email : ProductSafety@haulotte.com

5 - Compliance

5.1 - PRODUCT INFORMATION

Without the written permission from Haulotte, modifying a HAULOTTE® product is a Safety concern. Any modification may violate Haulotte design parameters, government regulations and industry standards.

If you desire a modification to the product, submit a request in writing to HAULOTTE®.

With the utmost care to ensure enhanced reliability and greater safety of the HAULOTTE® products, it is pertinent that when a "Service or Safety Bulletin" is issued, action is taken immediately. Once the bulletin has been addressed, make sure that the completed form is submitted to HAULOTTE®.

Do not hesitate to contact HAULOTTE Services®, should you have any questions relating to the issued bulletin(s) or with questions on the policy itself.

5.1.1 - Change of Ownership Notification

It is important and necessary to keep HAULOTTE Services® updated with current ownership of the machine. This way, HAULOTTE® will be able to provide the necessary support for the product. If you have sold or transferred this machine(s); it is your responsibility to notify HAULOTTE Services®. It is not required to include Lessees/Renters of Leased/Rented machines on this form.

Use the HAULOTTE® Product Status Notification form to report scrapped, stolen, missing or recovered machine(s).

5.1.2 - Owner information update form

Owner information update form	
Complete this form and mail or fax it to :	
HAULOTTE® subsidiary Name :	Address 1 :
Fax :	Address 2 :
e.mail address :	Address 3 :
Product information :	
Model :	Machine serial number :
Owner / Servicing information : Do not include leased or rented units in this form	
Current product owner 1 :	Current product owner 2 :
Name :	Name :
Company :	Company :
Address 1 :	Address 1 :
Address 2 :	Address 2 :
Country :	Country :
Phone :	Phone :
Date of ownership :	Date of ownership :
Signature :	Signature :
Date :	Date :
Company stamp is mandatory :	Company stamp is mandatory :
Tick here if the machine has been permanently removed from service (scrapped). The manufacturer's nameplate must be removed and returned to HAULOTTE Group when the unit is removed from service.	
Reason for removal :	

5.2 - PRODUCT SPECIFICATIONS

HAULOTTE® cannot be held liable for any changes to the technical characteristics/ specifications contained in this manual. HAULOTTE® has a continuous improvement policy in place for its product range; given this policy, the Company reserves the right to modify their products technical characteristics / specifications without notice.

Certain options can modify the machine's operating characteristics and its' associated safety. If your machine was originally delivered with options fitted, replacing a safety component associated with a particular option does not require any particular precaution other than those associated with the installation itself (static test)

Otherwise, it is essential to follow the manufacturer's recommendations as stated below :

- Installation by authorised HAULOTTE® personnel only.
- Update the manufacturer's identification plate.
- Have stability tests carried out by a certified agency/competent person.
- Ensure decals are updated.

Notes

1 - General safety

1.1 - INTENDED USE

To ensure the safe use of an Aerial Work Platform, support personnel must always be available on the ground. If necessary, support personnel will be required to operate the emergency functions of the machine and in rescuing the operator.

Do not operate the product in the following situations :

- On soft, unstable or cluttered ground.
- With wind blowing faster than the permissible limit.
  - Check the allowable wind speed specified in the performace specifications tabulation.
  - Consult the Beaufort scale.
- Close to power lines. Keep a safe distance.
- Outside of the temperature range -20°C / + 50°C (-4°F / +122°F).
- In an explosive atmosphere / environment.
- During storms.
- In the presence of strong electromagnetic fields.

***N.B.**-:-Use the machine under "normal" climatic conditions. If you need to use the machine in climatic conditions likely to cause deterioration (extreme : humidity, temperatures, salinity, corrosiveness, atmospheric pressure), contact HAULOTTE Services®. Reduce intervals between servicing.*

***N.B.**-:-While the machine is not in use, care must be taken to bring the machine to the fully stowed position. Ensure that the machine is locked in a secure location, and the control key is removed to prevent unauthorised use of the machine.*

1.2 - DECAL CONTENT

Decals are provided to alert the user of hazards inherent with the Aerial Work Platforms.
Decals provide the following information :

- The level of severity.
- The specific hazard.
- A method to avoid, suppress or reduce the hazard.
- Descriptive text (where required).

Familiarize yourself with the decals and the hazard severity levels.

CE and AS standards

ANSI and CSA standards

Marking	Description
1	Hazard symbol
2	Level of severity
3	Avoidance symbol pictorial
4	Avoidance text

Decals must be kept in good legible condition.
Familiarize yourself with the decals and their respective color codes.
Additional decals can be ordered from HAULOTTE Services®.

1.3 - SYMBOLS AND COLORS

Symbols and colors are used to alert the operator of safety precautions and/or to highlight important safety information.

The following safety symbols are used throughout this manual to indicate specific hazards and the hazard severity level when operating or maintaining the Aerial Work Platform.

Symbol	Description
	Danger : Risk of injury or death
	Caution : Risk of material damage
	Prohibited action
	Reminder to use good practice or follow pre-operation checks
	Cross-reference to another part of the manual
	Cross-reference to another manual
	Cross-reference to repair (contact HAULOTTE Services®)
N.B. :	Additional technical information

1.4 - LEVEL OF SEVERITY

Color	Title	Description
		Danger : Indicates a hazardous situation which if not avoided, WILL result in death or serious injury.
		Warning : Indicates a hazardous situation which if not avoided, COULD result in death or serious injury.
		Caution : Failure to comply could result in minor or moderate injury.
		Notice : Indicates recommended practices if not followed, may result in a malfunction or damage the machine or its components.
		Procedure : Indicates a maintenance operation.

1.5 - SYMBOLS LEGEND AND DEFINITIONS

Symbols are used throughout this manual to depict hazards, avoidance measures and indicate when information is required.

Refer to the following table to familiarize yourself with these symbols.

Symbol	Description	Symbol	Description	Symbol	Description
	Body crushing hazard		Foot crushing hazard		High pressure fluid ejection hazard
			Hand crushing hazard		Entanglement hazard
			Health/safety hazards related to chemicals		Health-damaging effects from hot work environment
	Electrical contact or lightning strike		Burns and scalds from contact with flames, explosion or radiation from heat sources		Injury from Electric arcs - Energy supply disconnecting devices - Batteries fire, emissions, etc
	Risk of operator(s) falling		Tip over due to excessive loading / wind load and excessive ground slope		Relate and coordinate directional arrows on the chassis with those on the control box
	Do not put foot in this area		Do not put your hand in this area		Keep away from product working area
	Never expose batteries and electrical component to high pressure washer		Ensure entry drop rail is down		
	Flames prohibited		Maintain safe clearance from high voltage electrically charged conductors as described in manual - Do not use in thunderstorms		Overload
	Refer to operator manual		Safety belt		Use appropriate lanyard attached to dedicated anchor point.
	Wheel pressure		Enable switch		Use safety prop before attempting any maintenance work
	Tow point		Tie down point		Lift point
	Keep away from hot surfaces		Wear protective equipment		

2 - Models description

Regulation	Models
ANSI and CSA standards	HA61JRT
	HA80JRT
CE, AS and EAC standards	HA20PX
	HA260PX

3 - Primary machine components

3.1 - LAYOUT

HA20PX - HA61JRT - HA260PX - HA80JRT

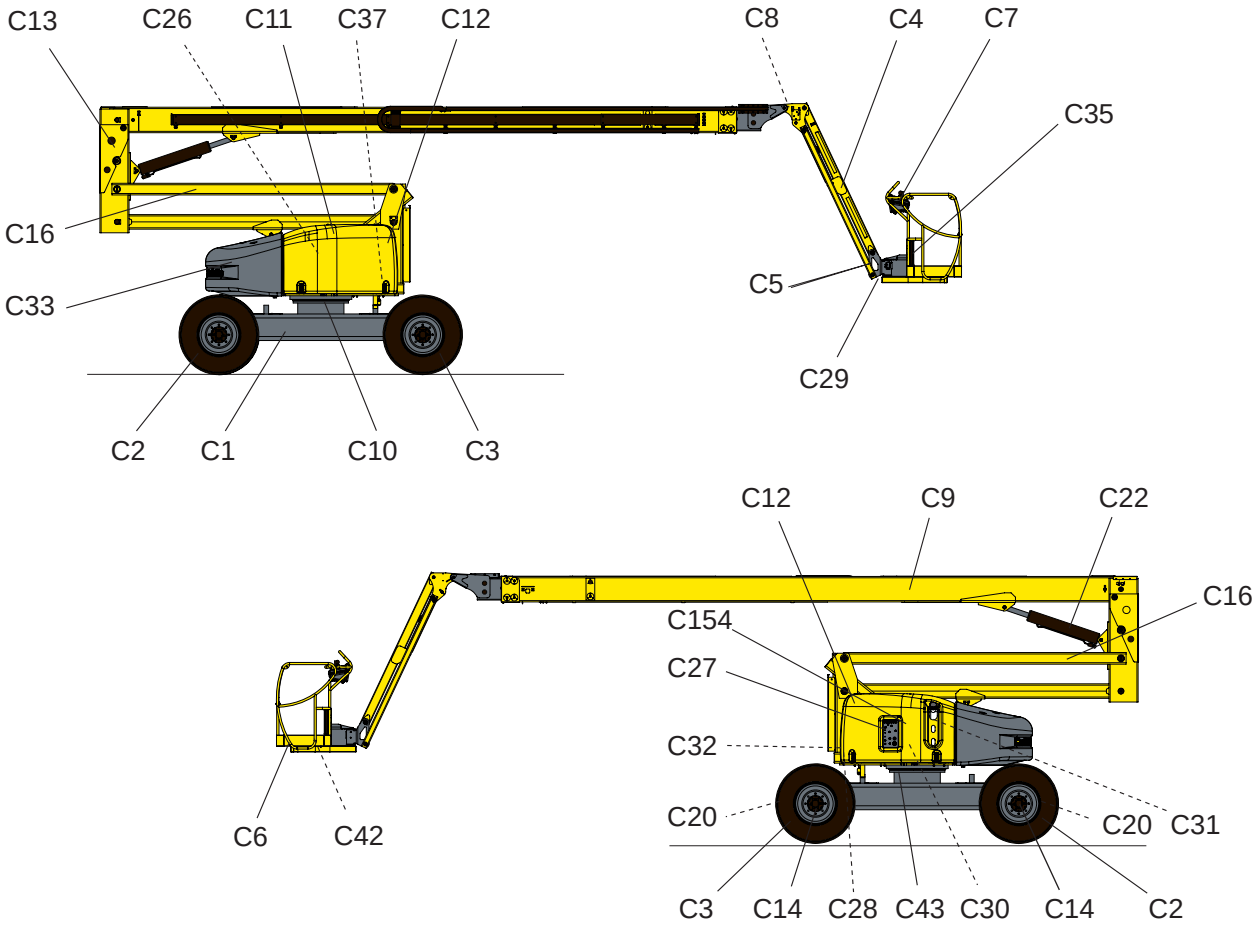

B - Familiarization

Marking	Description	Marking	Description
C1	Chassis	C20	Tie-down (and/or lifting) points
C2	Front driven steering axle	C22	Boom lift cylinder
C3	Rear drive and/or steer wheel	C26	Engine and hydraulic pump
C4	Jib	C27	Ground control box
C5	Platform support incorporating load limiter	C28	Tilt / Slope sensor
C6	Platform	C29	Platform rotation cylinder or Platform rotation motor(Depending on the machine)
C7	Platform control box	C30	Hydraulic oil tank
C8	Input jib compensation cylinder	C31	Fuel tank
C9	Upper boom	C32	Turntable rotation gearbox
C10	Slew ring	C33	Counterweight
C11	Turntable assembly	C35	Document holder
C12	Side cover	C37	Operating batteries
C13	Arm/Boom link piece	C42	'Enable Switch' pedal
C14	Hydraulic drive motor and reducer	C43	Turntable rotation lock pin
C16	Lower arm	C154	For Russia and the Ukraine only : Temperature probe relays

3.2 - GROUND CONTROL BOX

3.2.1 - Layout

General view

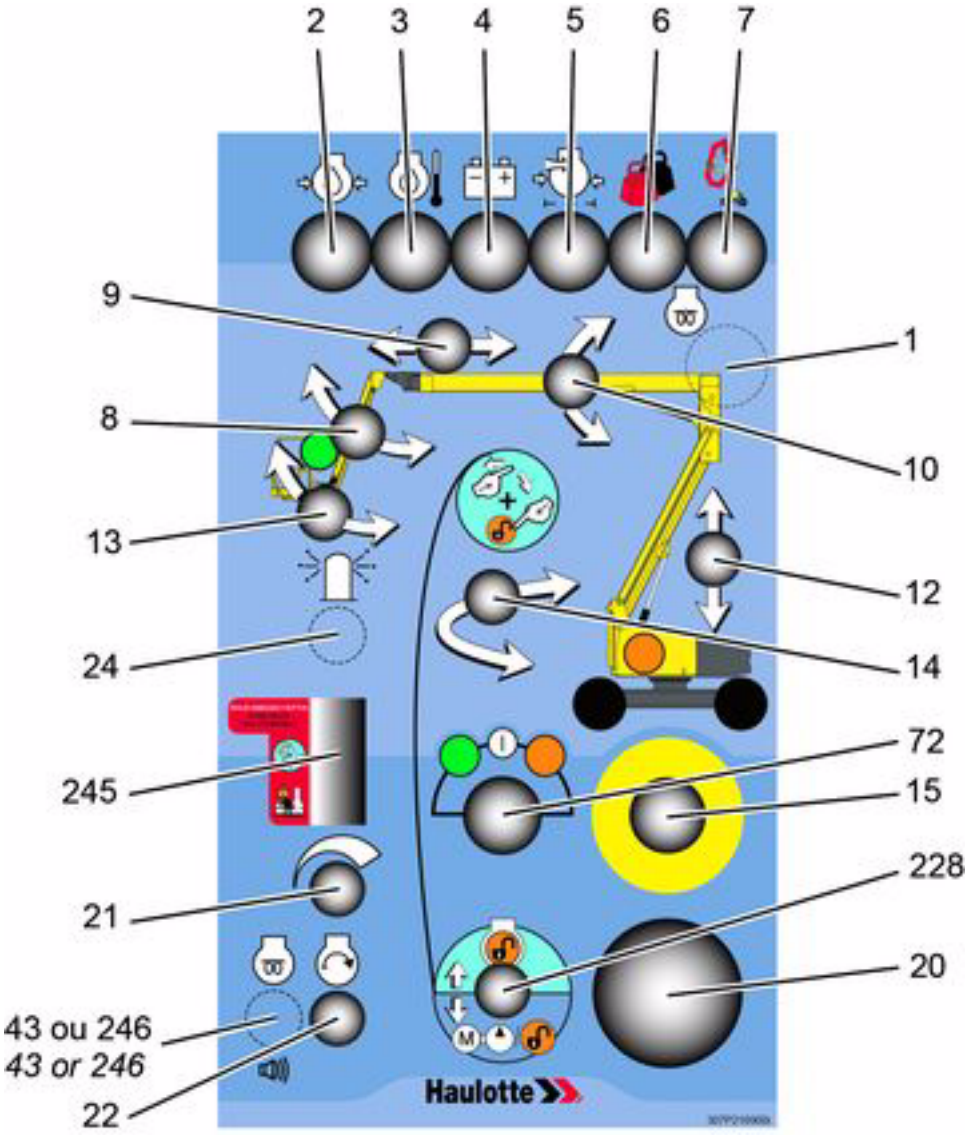

Controls and indicators

Marking	Description	Function
1	Electric pre-heating indicator(1)	On : Engine in pre-heating mode
		Off : Engine pre-heated, starting possible
2	Engine oil pressure light	Low engine oil pressure
3	Engine temperature indicator	High engine oil temperature
4	Battery charging indicator	Low battery charge
5	Air filter clogging indicator	Clogged air filter
6	Platform overload indicator	Platform overload
7	Radius limitation indicator	Close to radius limitation : • The indicator flashes • Movement is slowed down
		Radius limitation reached : • The indicator flashes continuously • An automatic movement is performed to return to the authorized radius limitation
8	Jib lifting / lowering switch	Move upwards : Jib lifting
		Move downwards : Jib lowering
9	Boom telescoping switch	Move to the left : To extend the boom out
		Move to the right : To retract the boom in
10	Boom raising switch	Move upwards : Boom raising
		Move downwards : Boom lowering
12	Arm lifting selector	Move upwards : Arm raises
		Move downwards : Arm lowers
13	Platform levelling	Move to the right : Platform leveling lowered or placed in transport position
		Move to the left : Platform leveling raised or placed in operating position
14	Turntable rotation switch	Move to the left : Counter clockwise (CCW) rotation
		Move to the right : Clockwise (CW) rotation
15	E-stop button	Pulled out : Ground control box energized
		Pushed in : De-energizes control system
20	Hour meter	Total machine running hours
21	Engine revs selector	Move to the right : Engine speed increases
		Move to the left : Engine idle speed
22	Engine start-up selector	Starting the engine
24	Beacon light on/off(2)	Move upwards : Beacon light on
		Move downwards : Beacon light off
43	Horn button(3)	Horn
72	Control box activation key selector	Left : Platform control box energized
		Center : De-energizes control system
		Right : Ground control box energized
228	'Enable Switch' selector / Back-up unit selector	Move upwards : Engine start
		Move downwards : Enable switch. If the engine is switched off, the emergency electropump is engaged automatically.
245	"Overriding system" switch under cover	Emergency lowering system enabled when the cover is lifted. This must be used ONLY when normal operation from the ground box is unavailable - use in emergencies ONLY.

(1.) For machines fitted with
(2.) For machines fitted with
(3.) For machines fitted with

3.3 - PLATFORM CONTROL BOX

3.3.1 - Layout

General view

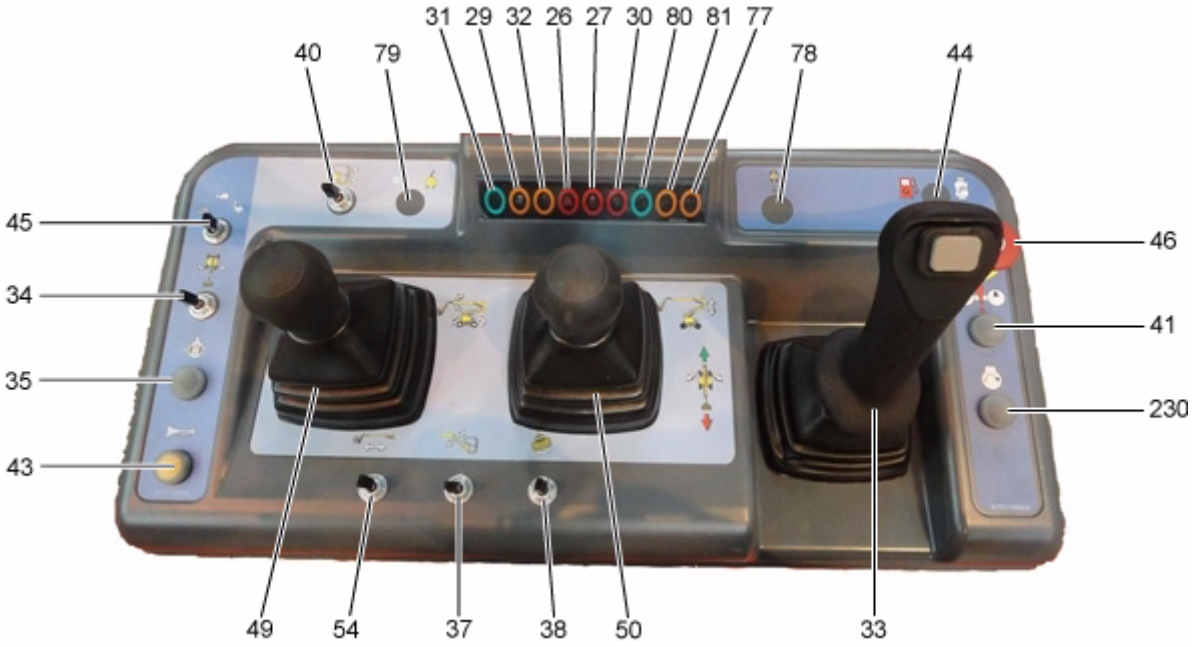

B - Familiarization

Controls and indicators

Marking	Description	Function
26	Fault indicator	Operation malfunction
		Machine on excessive slope
27	Tilt indicator	Machine on excessive slope
29	Fuel level indicator	Low fuel level
30	Platform overload indicator	Platform overload
31	Power ON indicator	On : Machine switched on
		Off : Machine switched off
32	Radius limitation indicator	Close to radius limitation : • The indicator flashes • Movement is slowed down
		Radius limitation reached : • The indicator flashes continuously • Control of a movement ensuring that the machine is maintained within the stability limits
33	Drive joystick	Move forward : Forward drive
		Move backwards : Reverse drive
	Front axle steering selector	Press right side of button : Right-hand steering
		Press left side of button : Left-hand steering
34	Rear axle steering selector	Move to the right : Right-hand steering
		Move to the left : Left-hand steering
35	Differential lock selector	Toggle and hold (activated) : Maximum drive torque (on difficult or sloping ground)
		Release (deactivated) : Standard torque
37	Jib lifting / lowering switch	Move upwards : Jib lifting
		Move downwards : Jib lowering
38	Platform rotation switch	Move to the right : Counter clockwise (CCW) rotation
		Move to the left : Clockwise (CW) rotation
40	Platform leveling switch	Move upwards : Raise platform
		Move downwards : Platform lowers
41	Back-up unit selector	Toggle and hold : Back-up unit activated
		Release : Back-up unit deactivated
43	Horn button	Horn
44	Petrol/Liquid propane gas selector(1)	LPG : Propane Gas supply
		G : Petrol/Liquid propane gas or diesel supply
45	Drive speed selector	High-speed drivie
		Medium-speed drive (difficult ground, slope)
		Low-speed drive
46	E-stop button	Pulled out : Ground control box energized
		Pushed in : De-energizes control system
49	Turntable rotation joystick	Move to the right : Counter clockwise (CCW) rotation
		Move to the left : Clockwise (CW) rotation
	Boom lift joystick	Move upwards : Boom raising
		Move downwards : Boom lowering
50	Arm lifting/lowering joystick	Move forward : Arm raises
		Move backwards : Arm lowers
54	Boom telescoping switch	Move to the right : To retract the boom in
		Move to the left : To extend the boom out
77	Not used	
78	Not used	

B - Familiarization

Marking	Description	Function
79	Generator selector (option)	Move to the left : Generator deactivated
		Move to the right : Generator activated
80	'Enable Switch' pedal indicator	On : Pedal pressed
		Off : Pedal released
81	Not used	
230	Engine start/stop push-button	Start or stop the engine (depending on the machine's operating status) by pressing the push-button

(1.) For machines fitted with

4 - Performance Specifications

4.1 - TECHNICAL CHARACTERISTICS

Use the table to select the right Haulotte machine for the job.

CE, AS and EAC standards

Machine	HA20PX		HA260PX	
Characteristics - Dimensions	**SI**	**Imp.**	**SI**	**Imp.**
Maximum working height	20,65 m	67 ft 9 in	25,60 m	84 ft 0 in
Maximum platform height	18,65 m	61 ft 2 in	23,60 m	77 ft 5 in
Maximum horizontal reach	14,00 m	45 ft 11 in	16,20 m	53 ft 2in
Maximum outreach above the ground	13,50 m	44 ft 4 in	15,70 m	51 ft 6 in
Maximum platform height before driving speed restriction	3,75 m	12 ft 4 in	5,20 m	17 ft 1 in
Maximum boom articulation point height	6,76 m	22 ft 2in	6,76 m	22 ft 2in
Turret rotation	360 °			
Platform rotation	180° (+ 90° / - 90°)			
Jib working range	140° (+70°/ -70°)			
Boom rotation angle	0/+75°			
Total weight	12000 kg	26455 lb	15890 kg	35031 lb
Maximum platform capacity	230 kg	507 lb	230 kg	507 lb
Maximum number of occupants allowed	2			
Maximum wind speed allowed	45 km/h	28 mph	45 km/h	28 mph
Manual force - CE - AS	400 N - 90 lbf			
Gradeability	40%			
Maximum rated slope allowed - CE - AS	5°			
Maximum load on wheel	4110 daN	9061 lb	6450 daN	14220 lb
Maximum ground pressure of wheel on paved ground	12 daN/cm²	2,45 lb/ft²	13 daN/cm²	2,65 lb/ft²
Drive speed :				
• Unfolded machine maximum speed - Micro-speed	0,5 km/h	0.3 m/h	0,5 km/h	0.3 m/h
• Folded machine maximum speed - High speed	4,5 km/h	2.8 m/h	4,5 km/h	2.8 m/h
Maximum freewheel speed during towed operation	4,5 km/h	2.8 m/h	4,5 km/h	2.8 m/h
Outside turning radius (with axles retracted)	4,15 m	13 ft 7 in	4,15 m	13 ft 7 in
Inside turning radius (with axles retracted)	1,90 m	6 ft 3 in	1,90 m	6 ft 3 in
Engine				
Diesel engine	DEUTZ - 33,2 kW - 45.1 hp			
CO emission	2,66 g/kWh			
HC + NO emission	6,27 g/kWh			
Particles emission	0,2 g/kWh			
Av fuel consumption :				
• BSFC/CSE	225 g/kWh			
• 70% power usage	6,8 L/h			
• Maximum power	36 kW			
Specifications - Performance				
Operating temperature	- 15° C/ + 45° C (- 59° F / + 113° F)			
Storage temperature	- 30° C / + 45° C (-22° F / + 113° F)			
Energy storage				
Type of battery	12 V 100 Ah 830 A			
Battery amperage	830 A			
Battery voltage	12 V			
Battery capacity	100 Ah			
Hydraulic tank capacity	150 L	39,6 gal US	76 L	21 gal US
Fuel tank capacity	150 L	39,6 gal US	62 L	16 gal US

B - Familiarization

ANSI and CSA standards

Machine	HA61JRT		HA80JRT	
Characteristics - Dimensions	**SI**	**Imp.**	**SI**	**Imp.**
Maximum working height	20,65 m	67 ft 9 in	25,60 m	84 ft 0 in
Maximum platform height	18,65 m	61 ft 2 in	23,60 m	77 ft 5 in
Maximum horizontal reach	14,00 m	45 ft 11 in	16,20 m	53 ft 2in
Maximum outreach above the ground	13,50 m	44 ft 4 in	15,70 m	51 ft 6 in
Maximum platform height before driving speed restriction	3,75 m	12 ft 4 in	5,20 m	17 ft 1 in
Maximum boom articulation point height	6,76 m	22 ft 2in	6,76 m	22 ft 2in
Turret rotation	360 °			
Platform rotation	180° (+ 90° / - 90°)			
Jib working range	140° (+70°/ -70°)			
Boom rotation angle	0/+75°			
Total weight	12000 kg	26455 lb	15890 kg	35031 lb
Maximum platform capacity	230 kg	507 lb	230 kg	507 lb
Maximum number of occupants allowed	2			
Maximum wind speed allowed	45 km/h	28 mph	45 km/h	28 mph
Manual force - ANSI - CSA	666 N - 150 lbf			
Gradeability	40%			
Maximum rated slope allowed - ANSI - CSA	0°			
Maximum load on wheel	4110 daN	9061 lb	6450 daN	14220 lb
Maximum ground pressure of wheel on paved ground	12 daN/cm²	2,45 lb/ft²	13 daN/cm²	2,65 lb/ft²
Drive speed :				
• Unfolded machine maximum speed - Micro-speed	0,5 km/h	0.3 m/h	0,5 km/h	0.3 m/h
• Folded machine maximum speed - High speed	4,5 km/h	2.8 m/h	4,5 km/h	2.8 m/h
Maximum freewheel speed during towed operation	4,5 km/h	2.8 m/h	4,5 km/h	2.8 m/h
Outside turning radius (with axles retracted)	4,15 m	13 ft 7 in	4,15 m	13 ft 7 in
Inside turning radius (with axles retracted)	1,90 m	6 ft 3 in	1,90 m	6 ft 3 in
Engine				
Diesel engine	DEUTZ - 33,2 kW - 45.1 hp			
CO emission	2,66 g/kWh			
HC + NO emission	6,27 g/kWh			
Particles emission	0,2 g/kWh			
Av fuel consumption :				
• BSFC/CSE	225 g/kWh			
• 70% power usage	6,8 L/h			
• Maximum power	36 kW			
Specifications - Performance				
Operating temperature	- 15° C/ + 45° C (- 59° F / + 113° F)			
Storage temperature	- 30° C / + 45° C (-22° F / + 113° F)			
Energy storage				
Type of battery	12 V 100 Ah 830 A			
Battery amperage	830 A			
Battery voltage	12 V			
Battery capacity	100 Ah			
Hydraulic tank capacity	150 L	39,6 gal US	76 L	21 gal US
Fuel tank capacity	150 L	39,6 gal US	62 L	16 gal US

4.2 - WORKING AREA / RANGE OF MOTION

HA20PX - HA61JRT

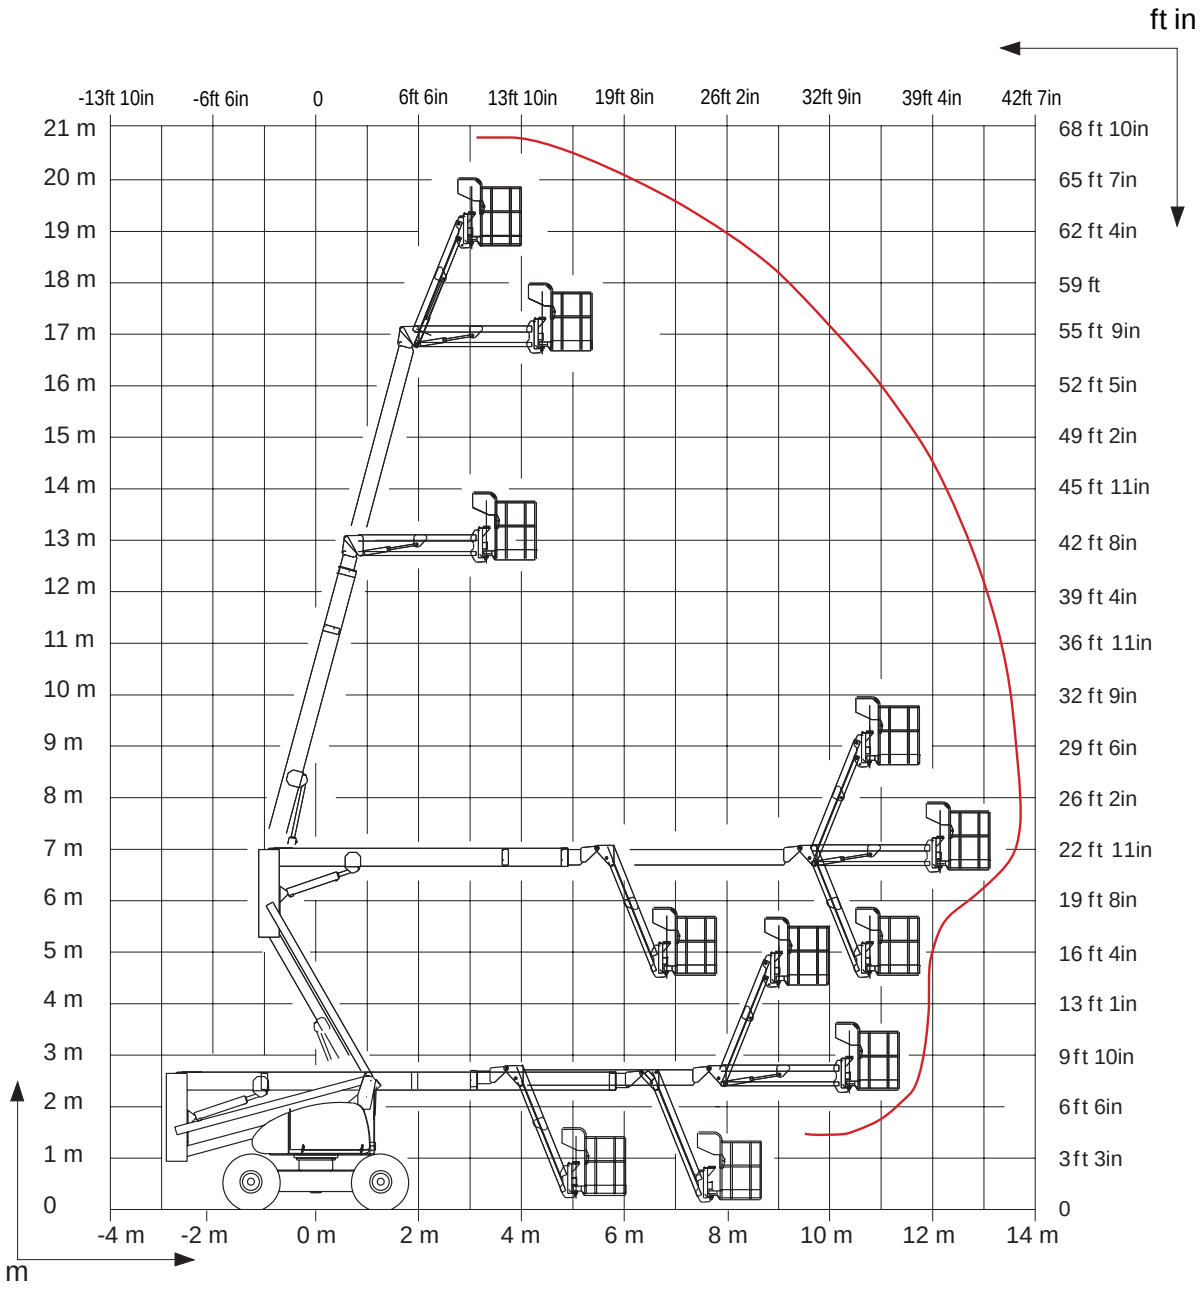

HA260PX - HA80JRT

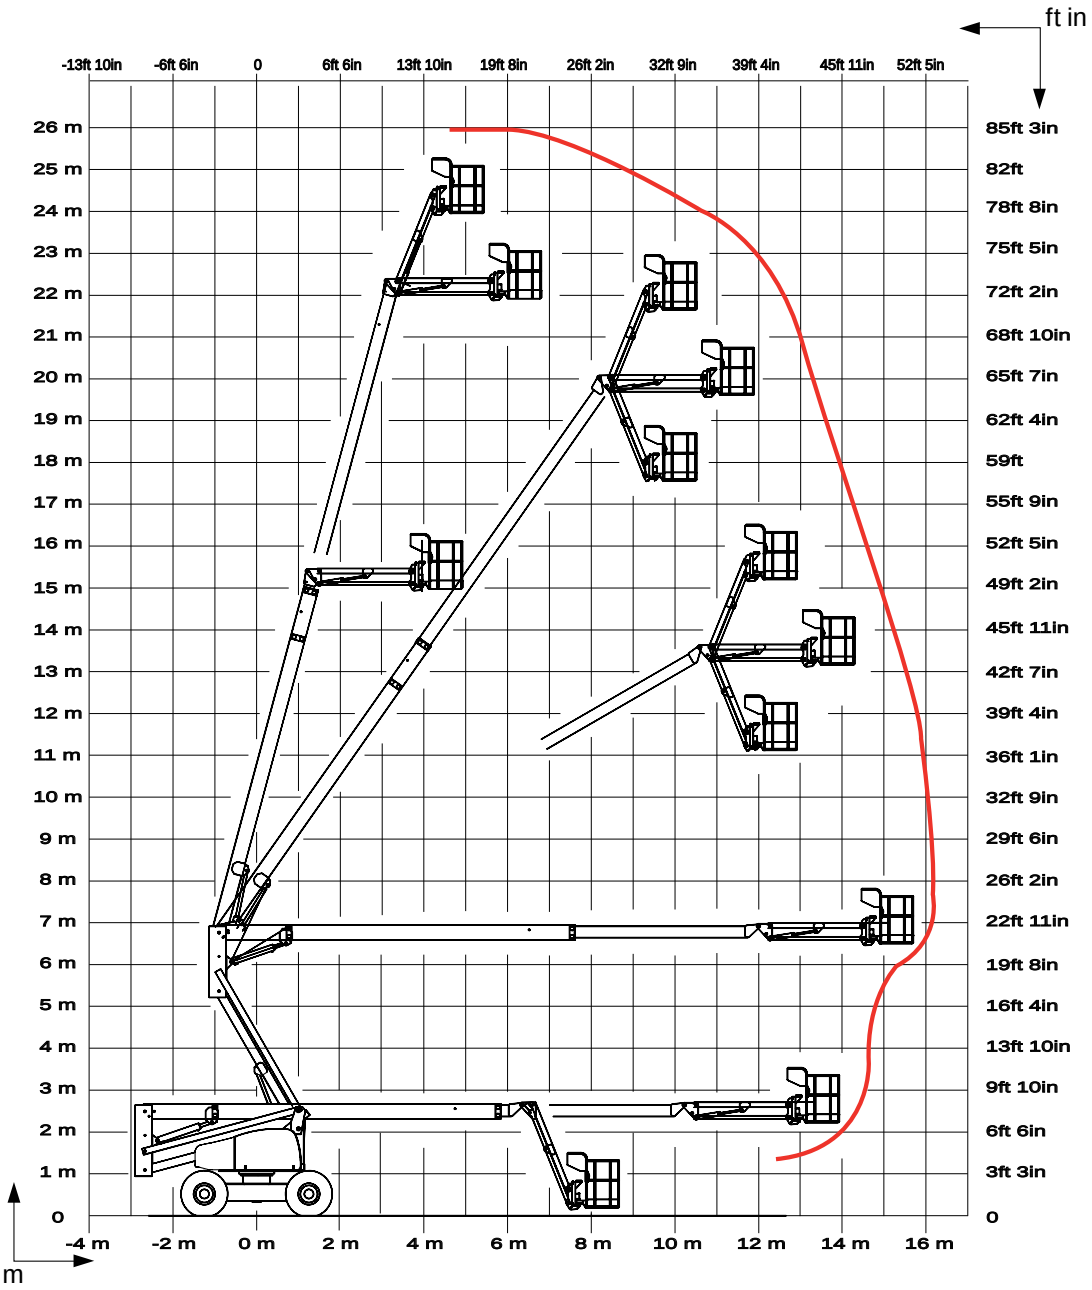

Notes

5 - Decals and markings locations HA20PX - HA61JRT - HA260PX - HA80JRT

CE standard

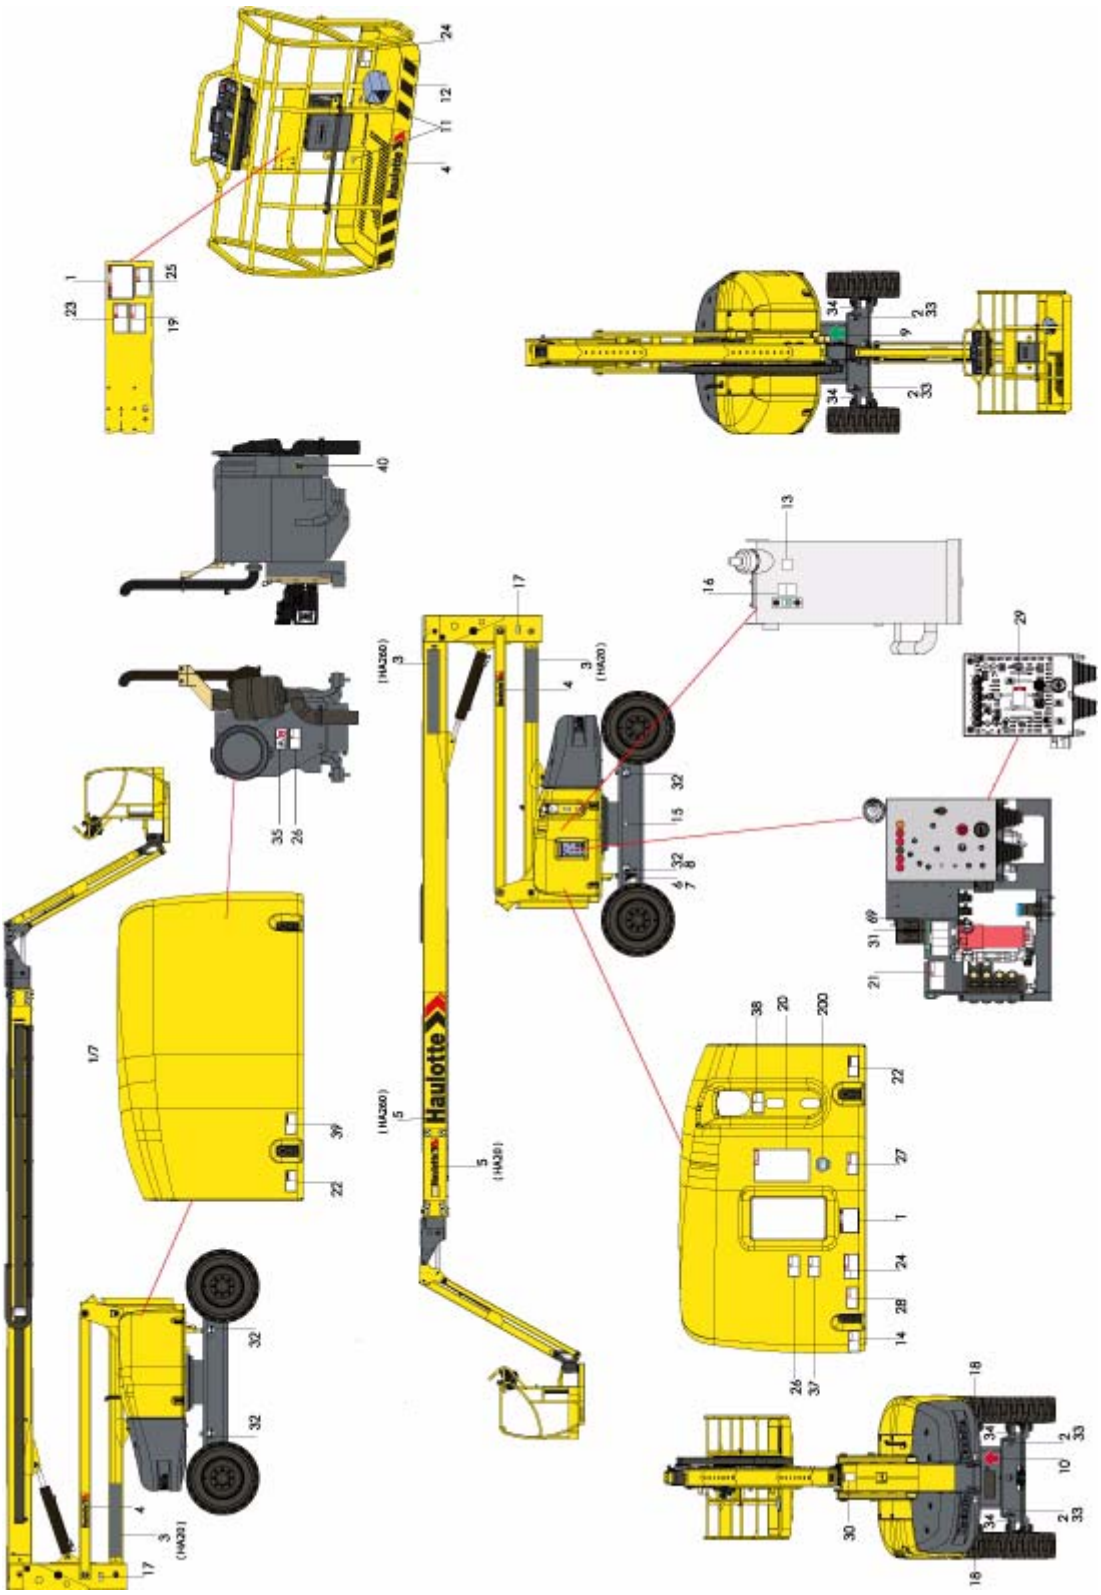

B - Familiarization

CE standard

Marking	Color	Description	Quantity	HA20PX	HA260PX
1	Red	Height of the floor and load - Single load machine	2	4000131440	4000131490
2	Blue	Maximum Pressure per Tire - Floor Loading	4	4000131550	4000131570
3	Other	Commercial name	1		307P216920
3	Other	Commercial name	2	3078137650	
4	Other	Small format HAULOTTE® logo	3	307P217080	
5	Other	Large format HAULOTTE® logo	1	307P217780	
5	Other	Large format HAULOTTE® logo	1		307P217240
6	Other	Identification plate	1	307P218070	
8	Other	Noise emission level	1	3078148740	
9	Other	Control of movements - GREEN directional arrow	1	3078143930	
10	Other	Control of movements - RED directional arrow	1	3078143940	
11	Other	Lanyard attachment points	2	307P216290	
12	Other	Material risk - Yellow and black adhesive tape	1	2421808660	
13	Other	Hydraulic oil	1	307P221080	
14	Red	Risk of crushing - Spindle	1	4000027080	
15	Green	Greasing the turntable rotation gear	1	4000025160	
16	Other	Max and min oil level	1	307P221060	
17	Red	Risk of crushing	2	4000024800	
18	Orange	Hand crushing hazard - Risk of crushed hands	2	4000024890	
19	Red	Operation instructions	2	4000025140	
20	Red	Operation instructions	1	In english : 4000243670 In french : 4000243680 In spanish : 4000243690	
21	Red	Prohibited use of the PVG	1		4000027070
22	Orange	Wound foot - Do not place foot	2	4000027090	
23	Red	Risk of crushing - Driving direction	1	4000024690	
24	Red	Danger of electrocution	2	4000025070	
25	Red	Risk of crushing - Closing drop rail	1	4000025080	
26	Red	Danger of electrocution - Ground for welding	1	4000027100	
27	Red	Do not park	1	4000024800	
28	Red	Verification of tilt operation	1	4000027110	
29	Red	Do not interchange	1	3078145180	
30	Red	Calibration if dismantled	1		307P216930
31	Green	Manual repair	1	4000131590	
32	Blue	Brake release	4	4000134960	
33	Blue	Anchorage point - Traction	4	4000027310	
34	Blue	Anchorage point - Elevation	4	4000027330	
35	Red	Electrocution Hazard - Water projection	1	4000025130	
37	Red	Risk of crushing - Platform	1	4000027460	
38	Red	Explosion hazard	1	4000027370	
39	Orange	Hand crushing hazard - Heat burns	1	4000027450	
40	Other	Engine oil - CJ-4	1	4000019700	
69	Other	Cut-off (Option)	1	4000420650	
200	Other	"Made in Europe"	2	4000137690	

AS standard

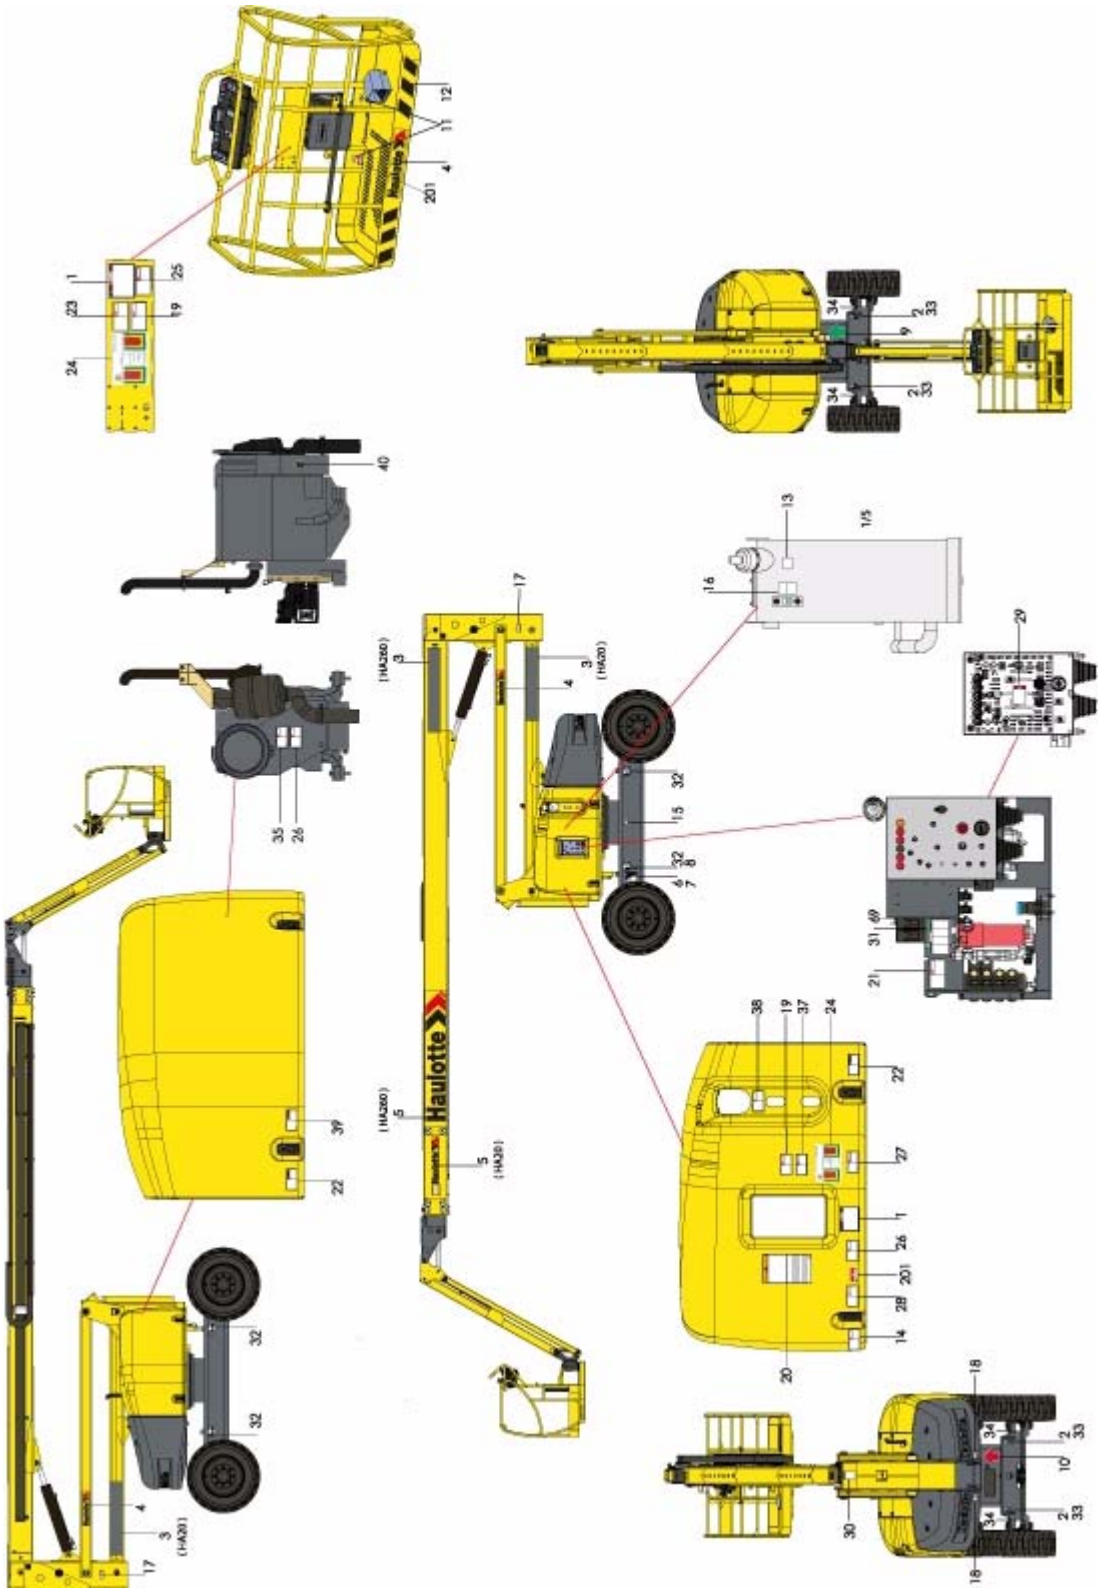

B - Familiarization

AS standard

Marking	Color	Description	Quantity	HA20PX	HA260PX
1	Red	Height of the floor and load - Single load machine	2	4000131440	4000131490
2	Blue	Maximum Pressure per Tire - Floor Loading	4	4000131550	4000131570
3	Other	Commercial name	1		307P216920
3	Other	Commercial name	2	3078137650	
4	Other	Small format HAULOTTE® logo	3	307P217080	
5	Other	Large format HAULOTTE® logo	1	307P217780	
5	Other	Large format HAULOTTE® logo	1		307P217240
6	Other	Identification plate	1	307P218070	
8	Other	Noise emission level	1	3078148740	
9	Other	Control of movements - GREEN directional arrow	1	3078143930	
10	Other	Control of movements - RED directional arrow	1	3078143940	
11	Other	Lanyard attachment points	2	307P216290	
12	Other	Material risk - Yellow and black adhesive tape	1	2421808660	
13	Other	Hydraulic oil	1	307P221080	
14	Red	Risk of crushing - Spindle	1	4000027080	
15	Green	Greasing the turntable rotation gear	1	4000025160	
16	Other	Max and min oil level	1	307P221060	
17	Red	Risk of crushing	2	4000024800	
18	Orange	Hand crushing hazard - Risk of crushed hands	2	4000024890	
19	Red	Operation instructions	2	4000025140	
20	Red	Operation instructions	1	3078144560	
21	Red	Prohibited use of the PVG	1		4000027070
22	Orange	Wound foot - Do not place foot	2	4000027090	
23	Red	Risk of crushing - Driving direction	1	4000024690	
24	Red	Danger of electrocution	2	4000227500	
25	Red	Risk of crushing - Closing drop rail	1	4000025080	
26	Red	Danger of electrocution - Ground for welding	1	4000027100	
27	Red	Do not park	1	4000024800	
28	Red	Verification of tilt operation	1	4000027110	
29	Red	Do not interchange	1	3078145180	
30	Red	Calibration if dismantled	1		307P216930
31	Green	Manual repair	1	4000131590	
32	Blue	Brake release	4	4000134960	
33	Blue	Anchorage point - Traction	4	4000027310	
34	Blue	Anchorage point - Elevation	4	4000027330	
35	Red	Electrocution Hazard - Water projection	1	4000025130	
37	Red	Risk of crushing - Platform	1	4000027460	
38	Red	Explosion hazard	1	4000027370	
39	Orange	Hand crushing hazard - Heat burns	1	4000027450	
40	Other	Engine oil - CJ-4	1	4000019700	
69	Other	Cut-off (Option)	1	4000420650	
201	Red	Wearing of a safety harness is essential	2	4000137690	

B - Familiarization

EAC standard

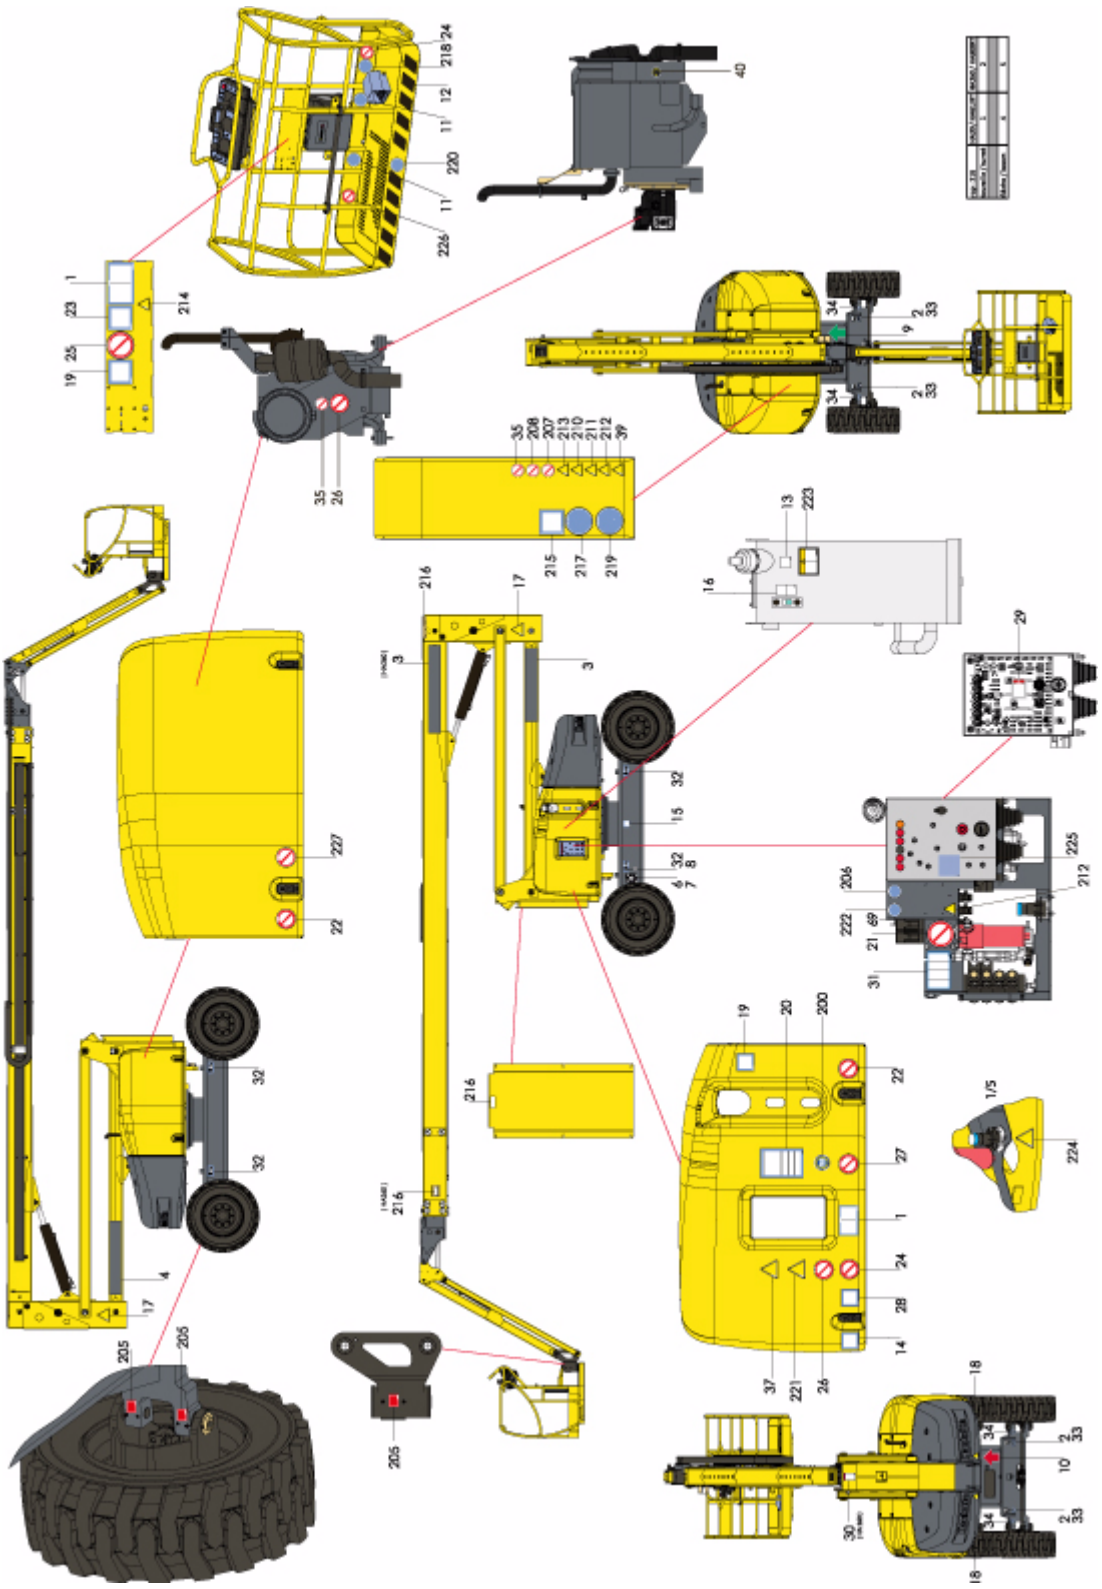

B - Familiarization

EAC standard

Marking	Color	Description	Quantity	HA20PX	HA260PX
1	Blue	Height of the floor and load - Single load machine	2	4000011940	4000011890
2	Red	Maximum Pressure per Tire - Floor Loading	4	307P215210	307P216880
3	Other	Commercial name	1		307P216920
3	Other	Commercial name	2	3078137650	
6	Other	Identification plate	1	For Russia : 4000278870 For Ukraine : 307P227830	
8	Other	Noise emission level	1	3078148740	
9	Other	Control of movements - GREEN directional arrow	1	3078143930	
10	Other	Control of movements - RED directional arrow	1	3078143940	
11	Blue	Harness attachment compulsory	2	307P227500	
12	Other	Material risk - Yellow and black adhesive tape	1	2421808660	
13	Other	Hydraulic oil	1	307P221080	
14	Blue	Risk of crushing - Spindle	1	307P227810	
15	Blue	Greasing the turntable rotation gear	1	307P227020	
16	Other	Max and min oil level	1	307P221060	
17	Yellow	Risk of crushing	2	307P227670	
18	Yellow	Hand crushing hazard - Risk of crushed hands	2	307P227660	
19	Blue	Operation instructions	2	For Russia : 307P227190 For Ukraine : 307P227840	
20	Red	Operation instructions	1	For Russia : 307P225160 For Ukraine : 307P227850	
21	Red	Prohibited use of the PVG	1		4000079680
22	Red	Wound foot - Do not place foot	2	307P227010	
23	Blue	Risk of crushing - Driving direction	1	307P227040	
24	Red	Danger of electrocution	2	307P226960	
25	Red	Risk of crushing - Closing drop rail	1	307P226950	
26	Red	Danger of electrocution - Ground for welding	1	307P226970	
27	Red	Do not park	1	307P227000	
28	Blue	Verification of tilt operation	1	For Russia : 307P227060 For Ukraine : 307P227870	
29	Red	Do not interchange	1	3078145180	
30	Red	Calibration if dismantled	1		307P216930
31	Blue	Manual repair	1	4000079730	
32	Blue	Brake release	4	4000135980	
33	Blue	Anchorage point - Traction	4	4000135970	
34	Blue	Anchorage point - Elevation	4	4000135960	
35	Red	Electrocution Hazard - Water projection	1	307P226780	
37	Yellow	Risk of crushing - Platform	1	4000014290	
39	Yellow	Hand crushing hazard - Heat burns	1	4000200810	
40	Other	Engine oil - CJ-4	1	4000019700	
69	Other	Cut-off (Option)	1	4000420650	
200	Blue	"Made in Europe"	1	4000137690	
205	Red	Lubrication point	9	307P219370	
206	Blue	Caution disconnection compulsory	1	307P226690	
207	Red	Flames prohibited	1	307P226750	
208	Red	Smoking forbidden	1	307P226760	
210	Yellow	Battery danger	1	307P226790	
211	Yellow	Fire Hazard	1	307P226800	
212	Yellow	Electrical danger	2	307P226810	
213	Yellow	Risk of burns	1	307P226830	
214	Yellow	Danger unstable side	1	307P226930	

B - Familiarization

Marking	Color	Description	Quantity	HA20PX	HA260PX
215	Blue	Battery maintenance	1	For Russia : 307P227180 For Ukraine : 307P227860	
216	Other	Tamper-proof	For HA20PX : 5 For HA260PX : 7	307P227450	
217	Blue	Caution glasses	1	307P227460	
218	Blue	Caution helmet compulsory	1	307P227470	
219	Blue	hand protection compulsory	1	307P227490	
220	Blue	Obligatory routing	1	307P227510	
221	Yellow	Danger unstable side	1	307P227680	
222	Blue	Plug12 V	1	307P227700	
223	Yellow	Winter grade hydraulic oil	1	307P223700	
224	Yellow	Tilt verification	1	4000011690	
225	Blue	Pre-heating and horn	1	4000014840	
226	Red	Do not travel down slopes in high speed	1	307P226990	
227	Red	No admittance to unauthorized persons	1	307P227560	

Notes

ANSI and CSA standards

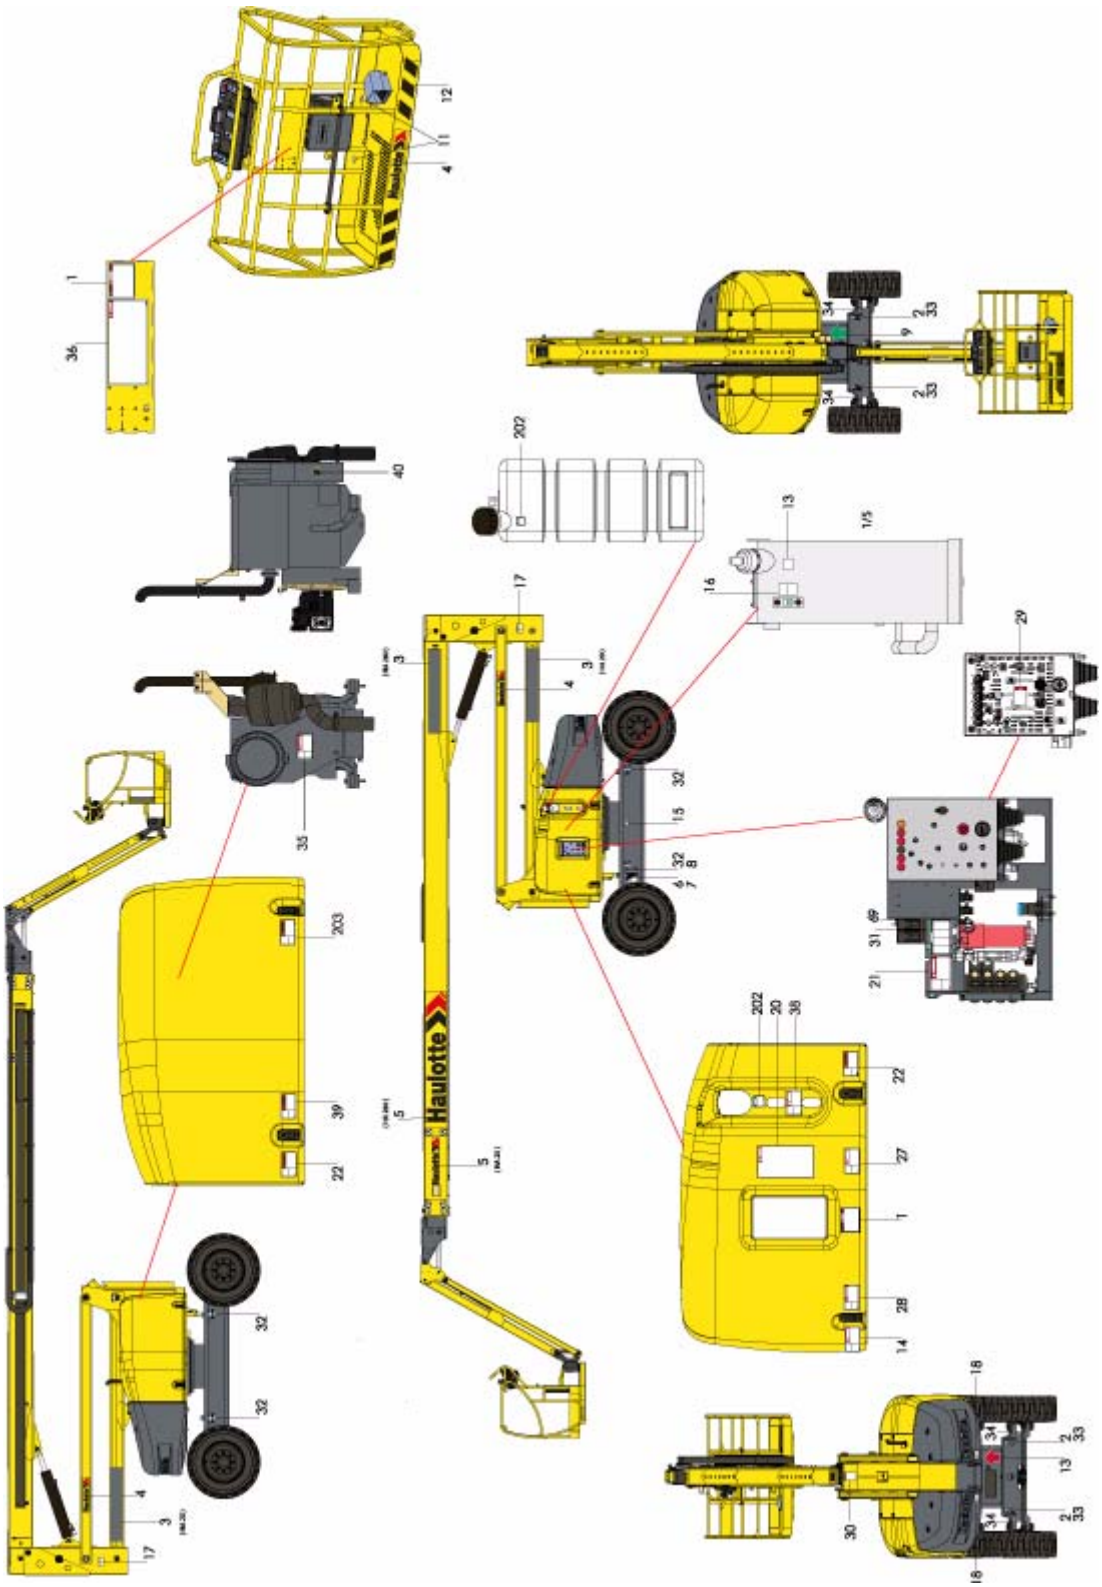

B - Familiarization

ANSI and CSA standards

Marking	Color	Description	Quantity	HA61JRT	HA80JRT
1	Red	Height of the floor and load - Single load machine	3	In english : 4000131450 In french : 4000131460 In spanish : 4000131470	In english : 4000131510 In french : 4000131520 In spanish : 4000131530
2	Blue	Maximum Pressure per Tire - Floor Loading	4	4000131560	4000131580
3	Other	Commercial name	1		3078147110
3	Other	Commercial name	2	3078146940	
4	Other	Small format HAULOTTE® logo	3	307P217080	
5	Other	Large format HAULOTTE® logo	1	307P217780	
5	Other	Large format HAULOTTE® logo	1		307P217240
6	Other	Identification plate	1	In english : 307P218170 In french : 307P218170 + 4000088480 In spanish : 307P218170 + 4000088490	In english : 307P218170 In french : 307P218170 + 4000088480 In spanish : 307P218170 + 4000088490
8	Other	Noise emission level	1	307P226480	
9	Other	Control of movements - GREEN directional arrow	1	3078143930	
10	Other	Control of movements - RED directional arrow	1	3078143940	
11	Other	Lanyard attachment points	2	307P216290	
12	Other	Material risk - Yellow and black adhesive tape	1	2421808660	
13	Other	Hydraulic oil	1	307P221080	
14	Red	Risk of crushing - Spindle	1	In english : 4000024830 In french : 4000068080 In spanish : 4000086510	
15	Green	Greasing the turntable rotation gear	1	4000025160	
16	Other	Max and min oil level	1	307P221060	
17	Red	Risk of crushing	2	In english : 4000024640 In french : 4000067680 In spanish : 4000086460	
18	Orange	Hand crushing hazard - Risk of crushed hands	2	In english : 4000024770 In french : 4000067710 In spanish : 4000086490	
20	Red	Operation instructions	1	In english : 4000027570 In french : 4000068880 In spanish : 4000086640	
21	Red	Prohibited use of the PVG	1	In english : 4000024820 In french : 4000067690 In spanish : 4000086470	
22	Orange	Wound foot - Do not place foot	2	In english : 4000024840 In french : 4000068180 In spanish : 4000086610	
27	Red	Do not park	1	In english : 4000024640 In french : 4000067680 In spanish : 4000086460	
28	Red	Verification of tilt operation	1	In english : 4000024860 In french : 4000068090 In spanish : 4000086520	
29	Red	Do not interchange	1	3078145180	
30	Red	Calibration if dismantled	1		307P216930
31	Green	Manual repair	1	4000131590	

B - Familiarization

Marking	Color	Description	Quantity	HA61JRT	HA80JRT
32	Blue	Brake release	4	4000134960	
33	Blue	Anchorage point - Traction	4	4000027310	
34	Blue	Anchorage point - Elevation	4	4000027330	
35	Red	Electrocution Hazard - Water projection	1	In english : 4000024810 In french : 4000068160 In spanish : 4000086590	
36	Red	Operation instructions	1	In english : 4000027580 In french : 4000083200 In spanish : 4000086650	
38	Red	Explosion hazard	1	In english : 4000025010 In french : 4000068130 In spanish : 4000086560	
39	Orange	Hand crushing hazard - Heat burns	1	In english : 4000025040 In french : 4000068110 In spanish : 4000086540	
40	Other	Engine oil - CJ-4	1	4000019700	
69	Other	Cut-off (Option)	1	4000420650	
202	Blue	Diesel Fuel Only	2	4000201430	
203	Orange	Protective clothing required	1	In english : 4000025030 In french : 4000068120 In spanish : 4000086550	

C - Pre-operation inspection

1 - Recommendations

The owner, the site manager, the supervisor and the operator are all responsible to ensure the machine is fit for the work it is to perform; i.e. that the machine is suitable to carry out the work in complete safety and in compliance with this Operator's Manual. All managers who are responsible for persons operating the machine must be familiar with the local regulations currently applicable in the country of use and ensure that they are adhered to.

Before using the machine, read the previous chapters in this manual. Ensure that you have understood the following points :

- Safety precautions.
- Operator's responsibilities.
- Conditions and the operating principles of the machine.

2 - Working area assessment

To ensure safety during operation, the following should be considered :

- Segregate other site traffic (delivery vehicles, dumpers, etc) from the work area.
- Check the work area for localised features, e.g. manholes, service ducts, potholes, etc.
- Check ground covers (temporary and permanent) are strong enough to withstand the applied pressure
- Check ground covers are secured and monitor them. Take similar action for permanent covers.
- Check the load bearing capacity (distributed load and point loading, e.g. outriggers) when working inside a building, or on a structure.
- Check the load bearing capacity (distributed load and point loading, e.g. outriggers) of the supporting ground.
- Provide supervision to ensure safe systems of work are appropriate and being used.
- Check for overhead crushing and contact hazards.
- Check weather conditions have not altered ground conditions (e.g. heavy or prolonged rain).
- Establish limits for safe operation (e.g. maximum wind speed). Remember conditions can change internally (e.g. if roller doors are opened).
- Comply with permit to work systems where sites have them (e.g. chemical plants).
- Provide a rescue plan for all risks, including falls and crush hazards. Ensure personnel understand and are appropriately trained in the rescuing procedures. Site based personnel trained in operation of functions and in the emergency lowering systems from the ground control box should be present. Ensure that access to the ground controls is available.
- Assess other alternative work methods or equipment before operating near a steep slope. If the machine must be placed near an edge or steep slope, ensure barriers are available to support the weight of the machine. Take into consideration the machine's stopping distance. If this is not possible, evaluate and establish the placement of machine and sequence of operations so that the aerial work platform can operate in a safe manner (e.g. machine is in line with the edge rather than towards the edge).

Extra care must be taken if aerial work platforms are used to manoeuvre up through several levels of steelwork. There is a risk of the operator being trapped should the basket strike the steelwork.

This risk increases with the number of steelwork levels and if material is piled up on lower level reducing the spacing between levels.

3 - Inspection and Functional test

3.1 - DAILY INSPECTION

Each day before the beginning of a new work session and with each change of operator, the machine must be subjected to a visual inspection and a complete functional test.

- **Never use a defective or a malfunctioning aerial work platform.**
- **If any item on the check list is marked "No" during the inspection; machine must be tagged and placed out of service.**
- **Do not operate the machine until all identified items are corrected and it has been declared safe for operation.**

In case of loose fasteners, refer to torque table value in maintenance book.

In case of leaks, replace the damaged part before use.

In case of structural part deformation, cracks, broken weld, paint chips, replace the part before use.

Sample of broken welds

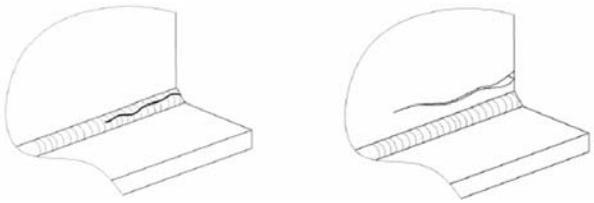

Inspection Forms are provided to assist your inspection process.

We recommend these forms to be completed daily and stored to assist with your maintenance schedule.

Each action is depicted in the daily inspection sheet using the following symbols.

	Visual inspection without disassembly		Lubrication-Grease		Functional adjustments
	Drain		Test and validate		Tighten
	Check levels		Systematic replacement		
	Visual inspection with small disassembly or movement needed to reach the part. Replacement is necessary.		Proof tests : Need HAULOTTE Services® authorization. For countries where machines are not subject to controlled periodic maintenance.		

C - Pre-operation inspection

Haulotte GROUP	Daily inspection				
	Visual inspection without disassembly		Check level		
			To check by test		
		Yes	No	Corrected	Not applicable
Manuals and displays. Clean or replace if necessary.					
Presence, cleanliness and legibility of the manufacturer's plate					
Presence, cleanliness and legibility of operator's and maintenance manuals					
Presence and cleanliness of load chart of the machine					
Control box (Ground and Platform)					
Presence and cleanliness of the control box					
No visible damage					
All decals at the control boxes are clean and legible					
Operation of start / stop device					
Operation of E-stop button device					
Operation of enable switch					
Operation of horn from platform control box					
Operation of movement from platform control box					
Test warning alarm lights and buzzer					
Overriding indicators turn off after 1 sec					
No abnormal noise and jerky movements from platform control box					
Joysticks and movement switches return to neutral					
Work Platform. Floor, guardrails, access and extensions					
No cracks, broken weld, paint chipped					
No deterioration and visible damage					
Harness anchor points are not cracked or damaged, with the decal attached and legible					
No screws missing / loose parts					
Entry bar/gate closes automatically and is not prevented from closing.					
Folding guard-rail (if fitted) is fixed securely in position					

C - Pre-operation inspection

Lift assembly (jib, boom, mast, arm, turret)					
No cracks, broken weld, paint chipped					
No deterioration and visible damage					
No screws missing / loose parts					
No foreign body in joints or slides					
Presence of securely fitted maintenance devices (safety stand)					
All compartments covers open and lock properly					
Frame, axle, steering system, stabilizers arms ...					
No cracks, broken weld, paint chipped					
No deterioration and visible damage					
No screws missing / loose parts					
No foreign body in joints or slides					
Condition of tires/tyres (wear, cutting, damage ...)					
Wheel reducer is undamaged and operates smoothly					
All compartments covers open and lock properly					
Rotation system : orientation turret, basket and jib					
No cracks, broken weld, paint chipped					
No deterioration and visible damage					
No screws missing / loose parts					
No foreign body in joints or slides					
Exterior gear wheel greasing					
Pin, pin stop, bearing ...					
Presence of the turret pin and its locking device					
No bent, cracked or broken pins, pin stops, bushes or bearings					
Pulleys, chains and wire rope					
No cracked or broken chains, links and fittings					
Pulleys and clamps are not worn, rusted or damaged					
Cylinder and hydraulic component : pumps, filters, manifold					
No leaks on the pump, tank or fittings					
No deformation, visible damage, broken weld or leaks on hydraulic cylinder					
No screws missing / loose parts					
Presence and operation of hydraulic filter (no clogged)					
Check hydraulic oil level is above the minimum level (Machine folded)					

C - Pre-operation inspection

Energy storage and motorisation: tanks, batteries and engine					
Engine oil level (add in stowed position)					
Fuel level (add in stowed position)					
No screws missing / loose parts					
Presence and good condition of hydraulic hose					
Presence and good condition of engine components					
Presence and good condition of the batteries: terminations and clamps, electrolyte level ...					
Electric cables					
No torn or split wire sheaths					
No evidence of chemical damage or corrosion on all cables					
No oxidation or corrosion on terminals					
Sensors and safety device					
Stabilizers operate correctly and lock securely in position					
Slope limiting device operates properly					
Axle locking device operate properly					
Pothole safety device operate properly (if equipped)					
Test of load sensing system (visual warning at control box)					

Serial number : Hours of operation : HAULOTTE Services® contract reference : Intervention record number : Date : Name :	Model : Signature :

4 - Safety functional checks

To protect the user and the machine, safety systems prevent the movement of the machine beyond its operating limits. These safety systems when activated immobilize the machine and prevent further movement.

The operator must be familiar with this technology and understand that is not a malfunction but an indication that the machine has reached an operation limit.

Aerial Work platforms are equipped with two control boxes which allow operators to safely use the machine. An auxiliary device (overriding system) is available on ground control box when primary power source fails. Each control box is equipped with an E-Stop button, which cuts all movements when pushed in.

The following checks describe the operation of the machine and the specific controls required.

For the location and description of these controls : refer to section B 3.2 and D 2 Ground control box and B 3.3 and D 3 Platform control box.

4.1 - E-STOP BUTTON CHECK

Ground control box E-stop button

Step	Action
1	Pull both E-Stop buttons (15) at ground box and (46) at platform box.
2	Turn the key of the control box activation selector (72) to the right to energize the ground control box. The indicators light up.
3	Push the E-stop button (15). The indicator goes out.

Platform control box E-stop button

Step	Action
1	Pull both E-Stop buttons (15) at ground box and (46) at platform box.
2	Turn the selector switch (72) to the left to energize platform control box. The indicators light up.
3	Push the E-stop button (46). The indicator goes out.

4.2 - ACTIVATION OF CONTROLS

The enable switch must be active to allow all movements.

The "Enable Switch" system depends on the machine configuration and will consist of one of the following :

- Joystick trigger at platform box (if fitted).
- Foot pedal switch in the basket.
- Enable switch at ground box.

4.3 - FAULT DETECTOR

N.B.-:-*The presence of this device depends on the machine configuration.*

The defect indicator flashs to indicate an internal malfunction.

The machine switches to downgraded mode.

Certain movements can be limited or forbidden to preserve the operator's safety.

4.3.1 - Buzzers test

From the ground control box

Step	Action
1	Pull both E-Stop buttons (15) at ground box and (46) at platform box.
2	Select the ground control box or the platform control box by turning the control box activation selector (72). The indicator (31) at the platform control box lights up, and there is an audible signal (beep).

4.4 - AUTOMATIC ENGINE CUT-OUT

The engine automatically cuts out in the following conditions :

- The alternator is not functioning.
- Engine temperature is too high.
- Oil pressure is too low.
- A machine malfunction is detected.
- The platform has gone outside the work area.
- E-stop(s) pushed in.

4.5 - OVERLOAD SENSING SYSTEM (IF FITTED)

If the platform load exceeds the maximum allowed load, no movement is possible from the 2 control boxes.

At ground and platform control boxes a buzzer sounds and an indicator light warns the operator

To return the machine to normal operation remove weight from the platform until the load is below the maximum allowed load.

Daily check that the LED's illuminate when the machine is switched on :

- Verify that the Overload system is active : Refer to Indicators (6) at ground and (30) at platform.
- Verify that the buzzers are functioning : Refer to Buzzers test

A periodic inspection of this device must be performed according to the recommendation in Maintenance Schedule.

4.6 - SLOPE WARNING DEVICE

From each control box, a buzzer alerts the operator that the machine is not folded/stowed and is positioned on a slope exceeding the slope allowed.

***N.B.**-:-The slope sensor is only active when the platform is not in the stowed position.*

When the unfolded machine is on a slope greater than the rated slope, out of the stowed position, DRIVE and LIFT functions are disabled(For CE and AS only).

All functions speeds are reduced.

In this case, fully lower the platform and reposition the machine on level ground before raising the platform again.

To restore the disabled functions, perform the following movements :

1. Completely retract the boom.
2. Lower the boom.
3. Lower the arm.
4. Lower the jib until it is below horizontal.

To check the tilt sensor at ground control box

Step	Action
1	Open the compartment cover (C12) (Machine components diagram) and locate the tilt sensor (C28) on the side of the ground control box.
2	Pull the E-stops (15, 46) at ground and platform panels.
3	Turn control box selector switch (72) to the right to energize the ground panel.
4	Start the engine from the ground control panel with engine start-up selector (22).
5	Raise boom above horizontal by moving switch (10) upwards or raise the jib by moving switch (8) upwards.
6	Locate the tilt sensor (C28) inside the side compartment cover. (Section B 3.1 - Layout)
7	Manually tilt and maintain the tilt sensor towards the front for a few seconds.
8	Check that the audible beep sounds.
9	For machines fitted with : The slope sensor prevents lifting and driving movements.

4.7 - TRAVEL SPEED LIMITATION

The machine has a selector of 3 driving speeds - low, medium and high.

All driving speeds are enabled when the machine is not elevated. Drive speed is proportional to the movement of the drive joystick (33). Adjust position of Jib to enhance field of vision during driving.

When the machine is elevated, drive speed is automatically reduced, regardless of the drive speed chosen.

Daily check that the speed is limited to less than 1 km/h (0.6 mph) when :

- The boom is raised by more than 10° above horizontal.
- The boom is telescoped/extended more than 400 mm (16 in.).
- The arm is raised by more than 2 m (6 ft 7 in) above horizontal.
- The jib is above horizontal line.

4.8 - LENGTH AND ANGLE SENSORS

For reasons of stability and work area management, the boom is equipped with length and angle sensors.

The length and angle sensors transmit data allowing the on-board calculator to automatic manage operation of combined movements.

Operating rules for HA260PX - HA80JRT

In certain configurations :

- When a control is activated to lower the boom, the system organises the combination of movements required for boom telescope.

4.9 - ON-BOARD ELECTRONICS

The machine is equipped with a specific calculator configured for this machine's functionalities.

Do not interchange the Calculator (calibration restoration) between machines..

4.10 - OPERATING TEMPERATURE (FOR RUSSIA AND THE UKRAINE ONLY)

Hydraulic energy to perform machine movements is provided by an electric motor driven hydraulic pump.The operating speed of the pump is governed by a speed regulator. If the temperature limits are reached, an audible alarm alerts the operator. All movements are cut off except getting back to transport position.

Temperature limits :

- Electric machines : from 0° C / 32° F to + 40° C / 104° F
- Fuel-powered machines : from - 20° C / - 4° F to + 40° C / 104° F

Location of operating temperature thermostat

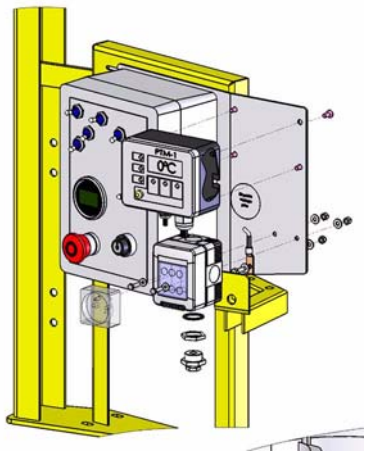

4.11 - RADIUS LIMITATION

For HA260PX - HA80JRT

N.B.-:-*The presence of this device depends on the machine configuration.*

The radius limit indicator *1 on the platform control box is a visual (orange) indicator.

- The radius limit indicator (32) on the platform control box is a visual (orange) indicator. For example : If boom lowering function is desired and activated, boom will automatically retract. It is not possible to activate other movements during this condition (safety precautions). Driving is disabled in this condition.
- This indicator flashes continuously when the operator requests a movement which would cause the platform to leave the stability limits (zone).

4.12 - DRIVE BUZZER

For Russia and the Ukraine only :

Each travel or lifting movement activates a buzzer (horn).

4.13 - MANUAL PRE-HEATING

The engine oil preheating option is designed for use at temperatures less than - 5 °C(23 °F) .

In these conditions connect the preheating sensor to the mains (230 V) for a maximum of 8 hours. After this time the machine must be started up for at least 2 hours

In this way the engine is protected from any trace of internal condensation due to preheating the engine oil.

The instructions for the engine oil preheating option are on the decals located as shown in the photograph :

Notes

1 - Operation

1.1 - INTRODUCTION

Only trained and authorized personnel shall be permitted to operate this aerial work platform.

Prior to operation :

- Read, understand and obey all instructions and safety precautions in this manual and attached to the aerial work platform.
- Read, understand and obey all Federal, State and local codes and regulations.
- Become familiar with the proper use of all controls and emergency systems.

1.2 - OPERATION FROM THE GROUND CONTROL BOX

- Turning OFF of the machine is performed with selector key switch (72) in the centre position. To turn ON the engine use selector key switch (22).
- Activation of a desired control box is achieved by turning the control box energizing selector switch (72) to the desired position.
- The ground control box is energized and is active ONLY when :
  - The E-stop buttons on both ground and platform control boxes are not pressed in (Deactivated).
  - The machine is switched on.
  - Ground control box is selected.
- An E-Stop button at each control box stops all movements when pressed in; including shutting off an engine (if equipped).

***N.B.**-:-An E-Stop button pressed in does not turn off the main power supply to the machine.*

- An enable switch (228) provided must be activated and maintained to authorize one or more function movements. If enable switch (228) is kept engaged without selecting a function movement for more than 8 s; enable switch is automatically de-activated.
- The release of "Enable switch" (228) while performing a movement stops all the movements. The stop of movements is progressive. If the "Enable switch" system is re-pressed, the movement doesn't restart. It could restart only when the selected function switch/joystick is released to neutral position.
- All switches operating a movement, return automatically to neutral when released.
- At power up, a switch in it's neutral position will be taken into account to authorize movement.
- "Enable switch" selector / Emergency pump
  - Engine running, the switch acts as an "enable switch" only.
  - Engine stopped, the switch acts as the "enable switch" and operate the emergency pump control.

D - Operation instructions

- Overriding system : The ground control box is designed for maintenance and emergency rescue operations only. Refer to Section D 4.2 To rescue operator in platform. .
- The status of the switches is tested automatically when the machine is switched on, and checked at every starting. A switch will be active only after it has been detected to be in neutral position. The following switches are not controlled :
  - Accelerator: engine rpm
  - Beacon light (if fitted)
- A switch provides the start and stop of the engine.
- Engine speed (If fitted) : Activating engine revs selector switch (21) increases engine speed (rpm).
- A buzzer beeps in the following conditions :
  - When power is switched on.
  - Overload (if fitted).
  - Slope if machine is out of stowed position.
  - Hydraulic oil overheating.
  - Movements option.
  - Driving option.
  - Movement option and driving.
- Indicators / Cluster : All indicators are checked after powering on the machine

1.3 - OPERATION FROM THE PLATFORM CONTROL BOX

- The platform control box is energized only when :
  - The E-stop buttons on both ground and platform control boxes are not pressed in.
  - Machine switched on at ground control box.
  - Platform control box selected from ground control box.
  - Overriding system not activated.
- A faulty joystick is not taken into account to control a movement. If this fault disappears, the movement is authorised again.
- An E-Stop button is present at each control box. When pushed in, it stops all functions movements and will shut off the engine (if equipped).
- A foot pedal and / or control box (enable) switch in the basket is present and should be activated to authorize one or more function movements. If the enable switch is kept active for more than 8 seconds without selecting a function movement, then movement is disallowed. The enable switch must be released (reset) before movement can occur.
- The release of foot pedal and / or control box (enable) switch while performing a movement stops all the movements. The stop of movements is progressive. If the foot pedal and / or control box (enable) switch is pressed again quickly within (0,5 s) the movement restarts. If the foot pedal and / or control box (enable) switch is not pressed again quickly enough within (+ 0,5 s) the movement will not restart. It could restart only when the selected function switch/joystick is released to neutral position.
- All switches and joystick operating a movement, return automatically to neutral when released.
- At power up, a switch in it's neutral position will be taken into account to authorize movement.
- The status of the switches is tested automatically when the machine is switched on, and checked at every starting. A switch or joystick will be active only after it has been detected in neutral position.
- A buzzer beeps in the following conditions :
  - When power is switched on.
  - Overload (if fitted).
  - Slope if boom and/or arm is in stowed position.
- Emergency pump. (Section D 4.1 In case of engine power failure)
- Indicators - All the indicators are tested
  - When the machine is switched on.

1.4 - OPERATION OF OVERRIDING SYSTEM FROM GROUND CONTROL BOX

Please refer to paragraph D.4.2 To rescue operator in platform.

2 - Ground control box

2.1 - TO START THE MACHINE FROM THE GROUND CONTROL BOX

1. Pull the E-stop button (15) : This will de-activate the state of E-stop button located in platform.
2. Turn the key of the control box activation selector (72) to the right to energize the ground control box. The following indicators on the control panel light up (Refer to B 3.2 - Ground control box) :
   - Electrical pre-heating (1).
   - Low engine oil pressure (2).
   - Engine temperature (3).
   - Battery charge (4).
3. The clogged air filter indicator (5) is switched off.
4. For machines fitted with : Hold down the engine preheating selector (246) for a few seconds, indicator (247) lights up.
5. Press the starter push-button (22). The engine starts. The indicator goes out.
6. Let the engine heat up.

To shut-down the machine from the ground control box :

- Turn the control box activation selector (72) key to the center.
- The machine is shut down. The power to the machine is switched off, all the indicators on the lower console are off.

2.2 - BOOM AND ARM CONTROLS

Platform leveling is available, regardless of the work height. Even at low movement speeds, use the controls with caution.

***N.B.**-:-Releasing the Enable Switch (footpedal) will stop all movements.*

Ground box controls (emergency station)

Control		Action
Lifting / lowering of boom	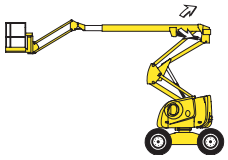	Push the boom raising switch (10) upwards to lift the boom. Push the boom raising switch (10) downwards to lower the boom.
Lifting/lowering of arm	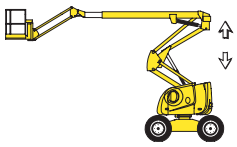	Push the arm lift/lower selector (12) upwards to raise the arm (Refer to B 3.2 - Ground control box). Push the arm lift/lower selector (12) downwards to lower the arm (Refer to B 3.2 - Ground control box).
Boom telescope extend/retract	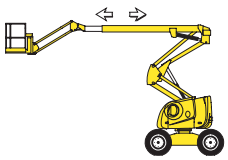	Push the boom telescoping switch (9) to the left to extend the boom. Push the boom telescoping switch (9) to the right to retract the boom.
Jib lifting/lowering (If applicable)	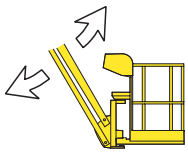	Push the jib switch (8) upwards to lift the jib. Push the jib switch (8) downwards to lower the jib.
Turntable rotation	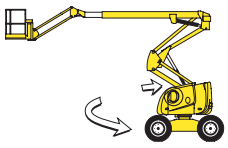	Push the turntable rotation switch (14) to the right for a clockwise (CW) rotation. Push the turntable rotation switch (14) to the left for a counter clockwise (CCW) rotation.
Platform leveling	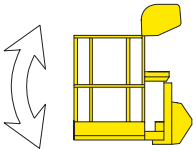	Move the platform leveling switch (13) to the right to lower the platform. Move the platform leveling switch (13) to the left to raise the platform (Refer to B 3.2 - Ground control box).

2.3 - ADDITIONAL CONTROLS FROM THE GROUND CONTROL BOX

For the machines equipped with beacon light :

- Push the beacon light selector switch (24) upwards to turn ON the beacon light. (Refer to B 3.2 - Ground control box)
- Push the beacon light selector switch (24) downwards to turn OFF the beacon light. (Refer to B 3.2 - Ground control box)

Engine speed increases :

- Turn the engine speed selector switch (21) to the right to increase speed.
- Turn the engine speed selector switch (21) to the left to idling speed.

***N.B.**-:-Accelerating the engine speed increases the speed of movements from the ground control box.*

3 - Platform control box

3.1 - TO START AND STOP THE MACHINE

To start the machine :

At the ground control box :

- Check that the E-stop button (15) is not pressed in.
- Turn the control box energizing selector switch (72) to the left to energize platform box. The ground box controls are de-energized.

At the platform control box :

- Pull the E-stop button 46if pressed in. The power on indicator (31) lights up.
- Press the starter push-button (230). The engine starts.
- Let the engine heat up.

***N.B.**-:-If the engine does not start, switch off the ignition (E-stop button pushed in). Repeat the start-up procedure.*

To stop the engine :

- Push in the E-stop button (46).

There is option to stop the engine by pressing the start / stop engine push- button (230).

3.2 - DRIVE AND STEER CONTROL

Before driving, locate the green / red orientation arrows on the chassis and platform control box. Move the drive controls in a direction matching the directional arrows.

To operate driving and steering functions, simultaneously operate the drive joystick (33) and the "Foot pedal / enable switch".

N.B.-:-*On uneven terrain, lower the boom to improve the drive performance.*

Control		Action
Driving		Move the drive joystick (33) forwards to drive the machine forwards. Move the drive joystick (33) backwards to drive in reverse.
Front-axle steering	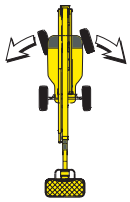	Push the front-axle steering selector thumb switch (33) to the right to steer to the right. Push the front-axle steering selector thumb switch (33) to the left to steer to the left.
Rear-axle steering	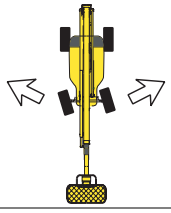	Push the steering selector button (34) to the right to steer right. Push the steering selector button (34) to the left to steer left.
Drive speed		Position the drive speed selector switch (45) on for high-speed driving.
		Position the driving speed selector (45) on for medium speed driving (crossing uneven ground, slope).
		Position the driving speed selector (45) on for low-speed driving (short distance, final approach, unloading from lorries/trucks).

3.3 - BOOM AND ARM CONTROLS

Activate the desired control and the enable switch (foot pedal switch) simultaneously to perform that selected function.

Foot pedal switch

Control		Action
Boom telescope extend/retract	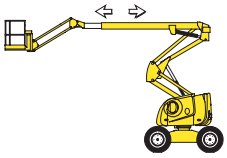	Push the boom telescoping switch (54) forwards to retract the boom. Push the boom telescoping switch (54) backwards to extend the boom.
Lifting / lowering of boom	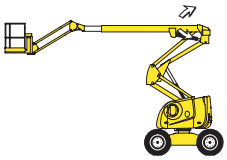	Move the boom/turntable joystick (49) upwards to raise the boom. Move the boom/turntable joystick (49) downwards to lower the boom (Refer to B 3.3 - Platform control box).
Lifting/lowering of arm	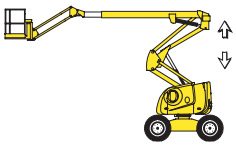	Push the arm joystick (50) forwards to raise the arm. Push the arm joystick (50) backwards to lower the arm.
Jib lifting/lowering	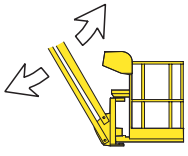	Push the jib switch (37) upwards to lift the jib. Push the jib switch (37) downwards to lower the jib.

D - Operation instructions

Control		Action
Turntable rotation	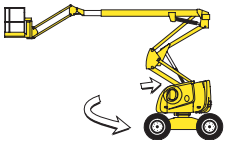	Move the boom/turntable joystick (49) to the left for a clockwise (CW) rotation. Move the boom/turntable joystick (49) to the right for a counter clockwise (CCW) rotation (Refer to B 3.3 - Platform control box).
Platform rotation	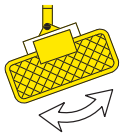	Move the platform rotation selector (38) to the right for a counter clockwise (CCW) rotation Move the platform rotation selector (38) to the left for a clockwise (CW) rotation.
Platform leveling	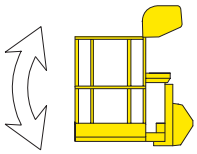	Move the platform leveling switch (40) upwards to raise the platform. Move the platform leveling switch (40) downwards to lower the platform.

4 - Emergency procedure

4.1 - IN CASE OF POWER LOSS

In case of loss of the main power source, the secondary (back-up) power unit, powered by the starting battery, allows movements to be controlled from both the ground and platform control boxes.

As the electric pump has limited power, it is advisable to reach the ground in the most direct manner possible.

The use of the electric pump is exclusively reserved for lowering the boom in emergency situations only. It is recommended to first retract the boom before lowering the boom. Performing other operations can lead to the deterioration of the electric pump.

***N.B.**-:-Test the operation of emergency system atleast once a month. Refer to the Maintenance manual*

Depending on the control box in use, push and hold the back-up/auxiliary power switch (228) at ground box or switch (41) at platform box. Retract the boom and lower it by using switches (9) and (10) at ground box or switch (54) and joystick (49) at platform box.

In an emergency, if the operator has to exit the platform while it is elevated, the transfer of the operator must respect the following recommendations. :

- Exit onto a sturdy and safe structure.
- The occupant(s) must ensure that 2 lanyards are used for security/safety. One must be attached to the designated anchorage point on platform the occupant(s) is in and the other attached to the structure intended to get on.
- Do not leave platform without taking into account the allowance for possibility of boom deflection when exiting platform.
- Occupant(s) must exit the current platform through the normal access.

***N.B.**-:-Do not detach the lanyard from the current platform if the transfer to the new structure poses any danger or until the transfer is safely completed. Do Not attempt to climb down the boom. Instead wait for assistance for a safe exit.*

4.2 - TO RESCUE OPERATOR IN PLATFORM

In a situation where an operator located in the platform needs to be rescued (for example in case of illness, injury or trapped against a structure making the control box inaccessible), the rescue personel at ground level needs to obtain rapid and direct access to operating functions.

HAULOTTE® provides a ground control emergency system that should be used to safely bring the operator into such a position that appropriate medical attention could be provided.

Unlike the ground control box used in lowering the boom, the overriding system allows trapped occupant(s) be lowered to the ground level, even if an E-Stop is engaged or if an overload is detected.

In this situation, supervisor(s) at ground level must turn the control box selector (72) to the "right" on the ground control box to take control. To safely activate movements from the ground control box, the enable switch (228) must be held activated/depressed.

Procedure :

- Turn the control box selector (72) to the "right" to energize the ground control box.
- The platform box controls are now de-energized.
- Check that the E-Stop button (15) at ground is not pressed in.
- To lower the platform, hold enable switch (228) downwards and simultaneously push the desired function switch.
- If the E-stop button (15) or a safety device do not allow normal movement from the ground control box, the overriding system is operated as follows :
  - Operate the "overriding system" switch (245) on the ground control box.
  - Simultaneously, push upwards and maintain overriding switch (245) in addition to desired movements actuator to obtain movement of the extending structure.

***N.B.**-:-Operation of the "overriding system" switch must be an exception and not a normal emergency operation.*

ONLY in these conditions, activate the "overriding system" switch (245) located under the cover and simultaneously press the platform lowering button until the safety mechanisms are deactivated (alarms stop) and therefore normal movements are possible again, or until the operator can be rescued.

"Overriding system" switch under cover

Once rescue operations are complete, write an incident report.

4.3 - NO POWER AVAILABLE

In case of loss of the main power and the secondary power unit not functioning, do not attempt to activate any function movement using hydraulic manifold unless trained and authorized by HAULOTTE Services®. All safety functions are no longer active and several hazards may occur. Improper use of the equipment will result in death or serious injuries.

If the operator cannot be lowered by any of the above mentioned methods, contact HAULOTTE Services® immediately.

5 - Transportation

5.1 - PUTTING IN TRANSPORT POSITION

To avoid any risk of machine movement during loading, ensure that :

- The loading ramp can support the machine weight.
- The loading ramp is correctly attached to transport vehicle.
- The loading ramp has sufficient grip surface.
- The transport vehicle must be parked on a level surface and must be secured to prevent rolling away while machine is being loaded or unloaded.

To climb the slope, select low driving speed.

If the slope is too steep, use a winch in addition to the low speed drive.

Do not place yourself below or too close to the machine during loading.

A wrong move can lead to machine tipping over and may cause serious injuries and material damage.

The machine must be completely in the stowed configuration :

- Check the platform is completely empty.
- Lower the boom and drive onto the truck bed.
- Ensure that the jib is raised as necessary to give ground clearance when driving the machine onto the loading ramp.
- Move the platform levelling selector (13) to the right to stow the platform in transport position.

***N.B.**-:-The release of the selector causes all movement to stop.*

- Secure the machine to the tie down points provided (See picture).
- Lock the turntable with the rotation stop pin located under the turntable before transporting.
- The platform/basket must be chocked and the boom strapped to prevent bouncing up and down, thus preventing possible material damage during transporting.
- Do not use excessive downward force when securing boom section.

5.2 - MACHINE LAYOUT

Turret rotation enabled

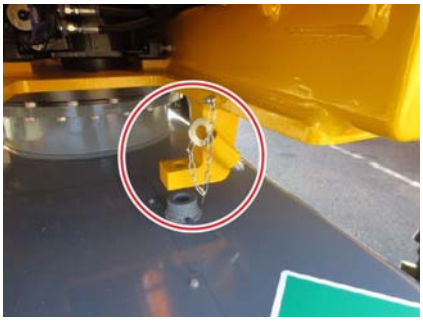

Turret rotation disabled

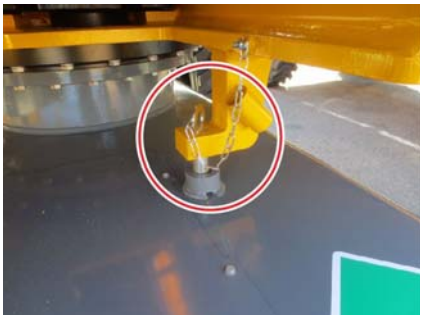

Machine stowing

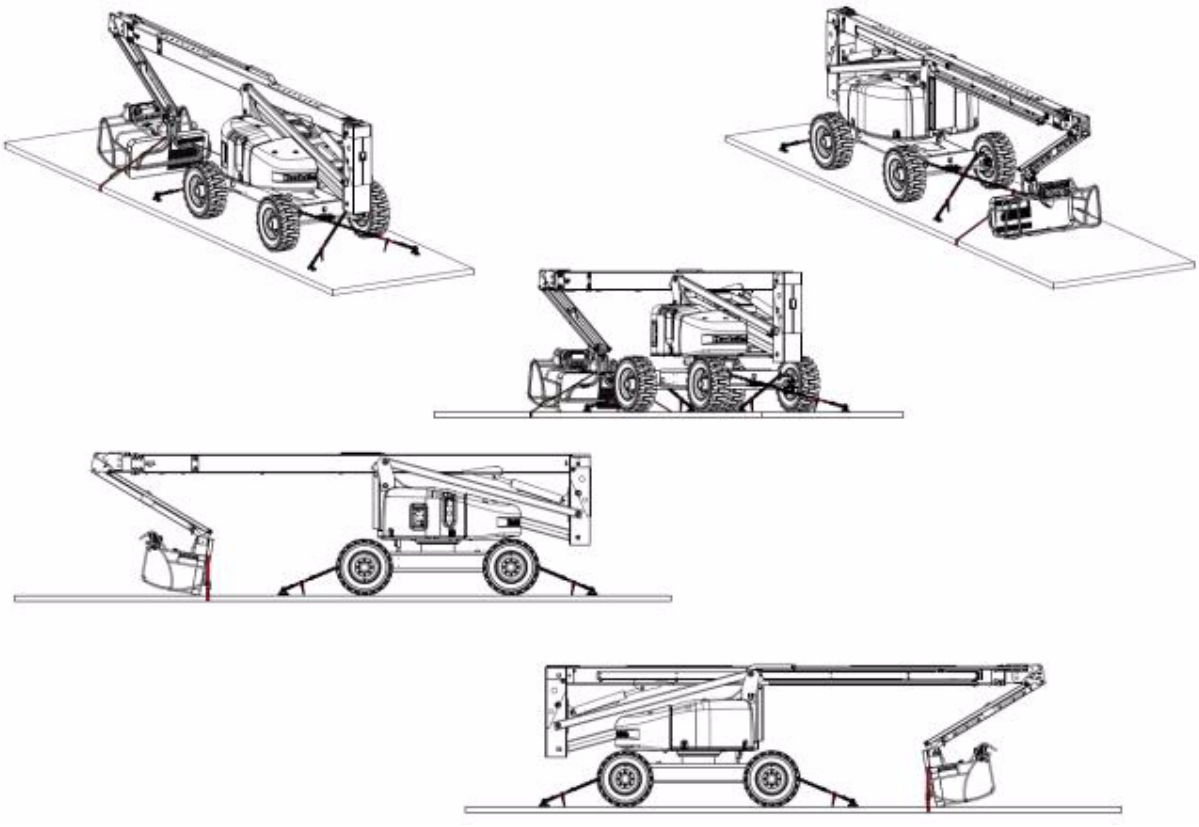

***N.B.**-:-Secure turntable with the turntable locking pin before traveling long distances or hauling machine on a truck.*

5.3 - UNLOADING

Before unloading, check that the machine is in good condition.

- Remove the turntable rotation locking pin.
- Remove the tie downs.
- Move the platform levelling selector (13) to the left to set the machine in the operating position.

N.B.-:-*The release of the selector causes all movement to stop.*

Warning : Upon starting a machine that has been secured and transported, the safety system may detect a false overload preventing all movement from the platform control box.

To reinstate the system, lift the jib a few centimetres (inches) using the ground control box.

- Select low drive speed at the platform control box.
- Start the machine.

Warning : Upon starting a machine that has been secured and transported, the safety system may detect a false overload preventing all movement from the platform control box.

To reinstate the system, lift the jib a few centimetres (inches) using the ground control box.

5.4 - TOWING

In the event of a machine breakdown, the machine can be towed a short distance to load it onto a transport vehicle :

- **Ensure that no one is in the platform during towing.**
- **Ensure boom is in the stowed position and the turntable is locked, prior to towing.**
- **The platform must be empty.**

To tow a broken-down machine, disconnect the wheel drive hubs.

Perform this operation on flat ground with wheels chocked.

In the towing configuration, the machine braking system is inactive. Use a drawbar to avoid any risk of accident :

- Do not exceed the maximum speed (machine unfolded) (Refer to Section B 4 Technical specifications).
- Do not exceed a grade of 25%.

5.4.1 - Disengaging the drive hubs

For HA20PX - HA61JRT only :

1. Loosen and remove plug (1) (Central nut).
2. Remove the spline pin (2) using a 6 x 50 screw.
3. Refit and tighten plug (1).

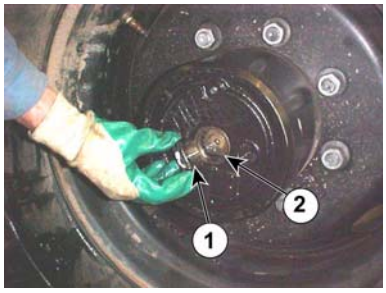

For HA260PX - HA80JRT only :

4. Loosen and remove the 2 fastening screws (1).
5. Remove the clutch stop (2).
6. Turn the clutch stop so that its domed part is towards the interior of the wheel gears.
7. Attach the clutch stop.

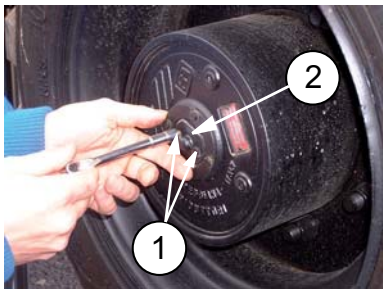

When drive hubs are disengaged, the machine is in free wheel mode and the brake system no longer functions.

5.4.2 - Re-engaging the drive hubs

For HA20PX - HA61JRT only :

Put the central plug back on each wheel.

N.B.-:-*During reassembly, place the central plug in the correct position on each wheel and top up the oil level in the gears.*

- To return machine to normal operation and braking, reverse the steps performed in disengaging the drive hubs.

Carry out a few driving movements. The drive hubs are now re-engaged.

For HA260PX - HA80JRT only :

After repairing the machine, re-engage the wheel drive hubs.

1. Loosen and remove the 2 fastening screws (1).
2. Remove the clutch stop (2).
3. Turn the clutch stop so that its domed part is towards the exterior of the wheel gears.
4. Attach the clutch stop.
5. Check the wheel gear oil level.

5.5 - STORAGE

When the machine is in elevated position, it is necessary to regularly switch the power ON to ensure that the security systems are active.

Machine must be parked in a protected/designated area with the boom in a stowed configuration, however the boom can be raised but must not be extended. Make sure there is no load in the platform.

It is recommended that the machine is not stored or immobilized unfolded; to avoid jeopardizing the safety of people and property.

Ensure all access panels, doors and side compartment covers are shut and secured.

Turn the energizing key selector switch (72) at the ground control box to the "center" position to shut OFF the power.

Ensure that the turntable rotation locking pin is removed and stored properly.

Remove the key switch to prevent unauthorized operation of the machine.

Storing of the machine with an obstacle under the boom structure is forbidden.

5.6 - LIFTING OPERATION

Before any crane operation, it is necessary to take into account the following points :

ONLY trained and authorized personnel should attempt to lift the machine.

Do not operate machine unless you have :

- been fully trained and are qualified in proper operation.
- read and understood the information in the Operator's manual of the machine.

5.6.1 - Safety precautions

It is the responsibility of the Operator to ensure there are no personnel or obstructions to safely perform the operation. :

- Engine exhaust contain some chemicals that are harmful. Always run an engine in a well-ventilated aera.
- If machine is operated inside a closed building, ensure that exhaust is properly routed to the outside of the structure.

5.6.2 - Necessary equipment

- PPE (Personal Protective Equipment: glove, safety shoe, glasses, etc…)
- Standard tool kit
- 2 spreaders 3 m (13 ft 1 in) 20 T
- 2 spreaders 3 m (13 ft 1 in) 15 T
- 12 shackles 8 T
- 4 slings 4 m (13 ft 1 in) 4 T
- 4 slings or chains 4 m (13 ft 1 in) 8 T
- 4 slings or chains 6 m (19 ft 8 in) 8 T

Technical specifications

Machine type	Maximum weight
HA20PX - HA61JRT	12000 kg (26455 lb)
HA260PX - HA80JRT	15890 kg (35031 lb)

5.6.3 - Preliminary procedures

- Inspect the surrounding area and position the machine at a safe distance from electrically charged conductors to ensure that no part of the machine is within an unsafe area. Always stay clear of overhead obstructions.
- Respect the local rules and the minimum safe distance from power lines.
- Turn off the engine.
- Remove the ignition key.
- Ensure that the main power is disconnected.
- Place a "DO NOT USE" decal near the start/stop switches to inform personnel that machine is not operational during the lifting process.
- Cordon off the area surrounding the machine to keep personnel, vehicles and moving equipment away from the machine.
- Remove all loose items from the machine.
- Ensure that vehicle capacity and loading equipment - hoists, chains, straps, etc. are of sufficient strength to withstand maximum machine weight.
- Attach the rigging ONLY to the designated lifting points on the machine.

5.6.4 - Procedure for the use of slings

The machine must be fully stowed (boom retracted and in horizontal position). The turret must be at 90 ° in relation to the axis of the chassis for HA260PX - HA80JRT or in the axis for HA20PX - HA61JRT. Designated lifting points are marked/labeled with the following symbol .

1. Position the spreaders line up with the chassis.
2. Fold up the 4 slings 4 m (13 ft 1 in) 4 T over the axles with protective sheathing positioned appropriately. Adjust properly to prevent any damage to the machine.

Make sure that the steering rods and associated hoses are not captured by the slings over the axle.

Pay particular attention to avoid slings over sharp edged surfaces as they may be severed/damaged.

3. Attach the slings using shackles

D - Operation instructions

HA20PX - HA61JRT

HA260PX - HA80JRT

Properly adjust rigging to keep the machine level and to minimize the risk of damage to the machine.

- **Lifting procedure must be handled very carefully.**
- **All movements of the machine must be performed slowly and deliberately to minimize swaying of the machine being lifted.**
- **Always keep machine as close as possible to the ground level.**

D - Operation instructions

HA20PX - HA61JRT

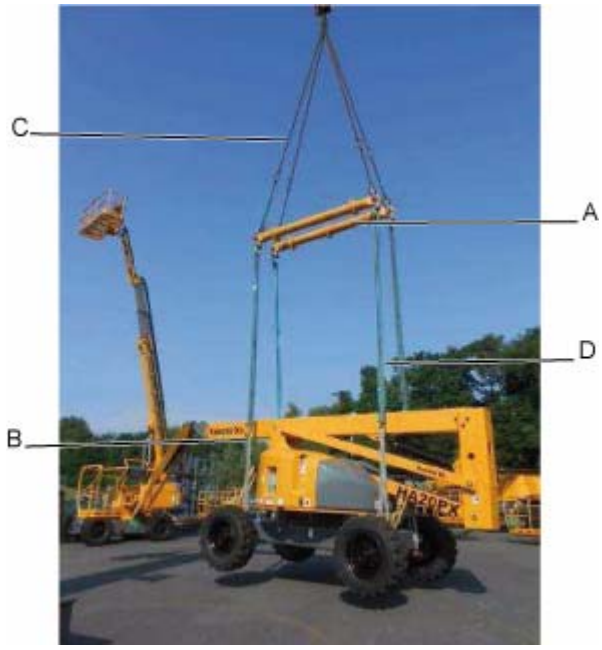

HA260PX - HA80JRT

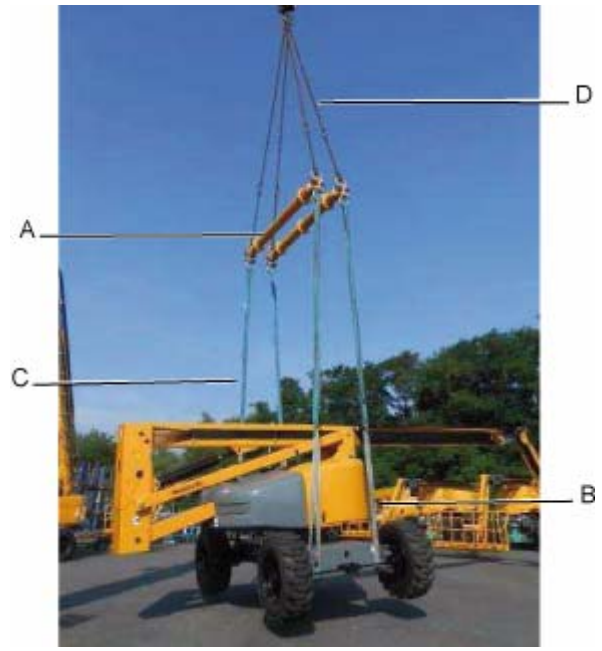

Marking	Description
A	for HA20 - HA61JRT : 2 spreaders 4 m (13 ft 1 in) 15 T in the axis of the chassis for HA260 - HA80JRT : 2 spreaders 4 m (13 ft 1 in) 20 T in the axis of the chassis
B	4 slings 4 m (13 ft 1 in) 4 T to attach the machine
C	4 slings 4 m (13 ft 1 in) 8 T and 8 shackles 8 T between the attachment straps and the spreaders
D	4 slings 6 m (19 ft 8 in) and 4 shackles 8 T between the spreader beams and the crane

6 - Cold Weather Recommendations

In cold weather conditions, allow engine to run for at least 5 min and warm up ; before operating any function thereby preventing any damage to the hydraulic system.

In extreme cold conditions, machines should be equipped with optional cold start kits.

Attempting to start engine when temperature is in the negative range, may require the use of a booster battery.

If engine fails to start, do not crank for an extended time. Allow starter to "cool off" for a few minutes before attempting again. If engine fails after several attempts, refer to the engine maintenance manual.

***N.B.**-:-Initial starting should always be performed from the ground control box.*

6.1 - ENGINE OIL

The correct SAE viscosity grade of oil is determined by the minimum ambient temperature during cold engine start-up, and the maximum ambient temperature during engine operation.

Generally, use the highest viscosity oil that is available to meet the requirement for the temperature at start-up.

Engine oil viscosity		
EMA LGR-1 / API CH-4 Viscosity grade	Ambient temperature	
	Minimum	Maximum
SAE 0W20	-40°C (-40°F)	10°C (50°F)
SAE 0W30	-40°C (-40°F)	30°C (86°F)
SAE 0W40	-40°C (-40°F)	40°C (104°F)
SAE 5W30	-30°C (-22°F)	30°C (86°F)
SAE 5W40	-30°C (-22°F)	40°C (104°F)
SAE 10W30	-20°C (-4°F)	40°C (104°F)
SAE 15W40	-10°C (14°F)	50°C (122°F)

***N.B.**-:-For additional engine recommendation, refer to the engine manual provided with the machine.*

6.2 - HYDRAULIC OIL

External environmental conditions can reduce performance of the machine if the hydraulic oil temperature does not reach its optimum range.

It is recommended to use the hydraulic oil according to weather condition. Refer to the table below.

Environmental conditions	SAE Viscosity grade
Ambient temperature between - 15°C (5°F) and + 40°C (+ 104°F)	HV 46
Ambient temperature between - 35°C (- 31°F) and + 35°C (+ 95°F)	HV 32
Ambient temperature between 0°C (+ 32°F) and + 45°C (+ 113°F)	HV 68

***N.B.**-:-It is recommended to replace low temperature oil as the ambient temperature reaches + 15°C (59°F). It is not advisable to mix oils of different brands or types.*

6.3 - PREHEATING OPERATION

When power is switched ON, the electric pre-heating indicator (1) (at the ground control box) and / or (51)  (on the platform control box) flashes, the motor is in automatic pre-heating. Upon the extinction of this light (just seconds) at the ground display, starting of the machine is possible.

Notes

Notes

1 - Machine dimensions

Stowed / Transport position : Configuration that takes the minimum floor space necessary for storage and / or delivery of the machine - Access position.

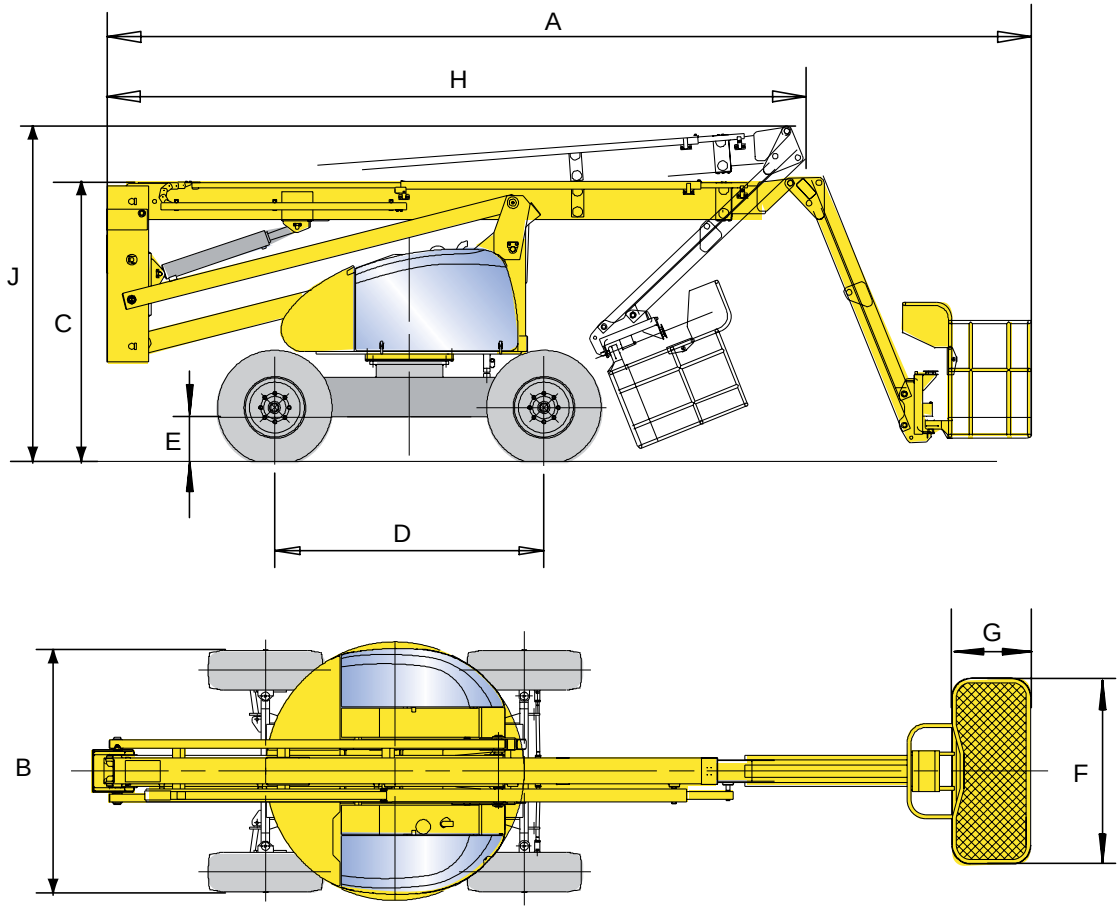

E - General Specifications

CE, AS and EAC standards

Machine		HA20PX		HA260PX	
Marking	**Specifications - Dimensions**	**SI**	**Imp.**	**SI**	**Imp.**
A	Overall length of machine	9,20 m	30 ft 2 in	12 m	39 ft 4 in
B	Overall width of machine	2,38 m	7 ft 10 in	2,38 m	7 ft 10 in
C	Overall height of machine	2,71 m	8 ft 11 in	2,71 m	8 ft 11 in
D	Wheel base	2,80 m	9 ft 2 in	2,80 m	9 ft 2 in
E	Ground clearance	42 cm	17 in	42 cm	17 in
F X G	Platform dimensions	1,8 x 0,8 m	5 ft 11 in x 2 ft 7 in	1,8 x 0,8 m	5 ft 11 in x 2 ft 7 in
H	Storage length	6,80 m	22 ft 4 in	9,50 m	31 ft 2 in
J	Storage height	3,20 m	10 ft 6 in	3,30 m	10 ft 10 in

ANSI and CSA standards

Machine		HA61JRT		HA80JRT	
Marking	**Specifications - Dimensions**	**SI**	**Imp.**	**SI**	**Imp.**
A	Overall length of machine	9,20 m	30 ft 2 in	m	22 ft 2 in
B	Overall width of machine	2,38 m	7 ft 10 in	2,38 m	7 ft 10 in
C	Overall height of machine	2,71 m	8 ft 11 in	2,71 m	8 ft 11 in
D	Wheel base	2,80 m	9 ft 2 in	2,80 m	9 ft 2 in
E	Ground clearance	42 cm	17 in	42 cm	17 in
F X G	Platform dimensions	1,8 x 0,8 m	5 ft 11 in x 2 ft 7 in	1,8 x 0,8 m	5 ft 11 in x 2 ft 7 in
H	Storage length	6,80 m	22 ft 4 in	9,50 m	31 ft 2 in
J	Storage height	3,20 m	10 ft 6 in	3,30 m	10 ft 10in

2 - Major component masses

N.B.-:-*Masses measured with empty tanks.*

Component	HA20PX - HA61JRT	HA260PX - HA80JRT
Frame assembly mass	**3104 kg - 6844 lb**	
• Wheel mass of each	**290 kg - 639 lb**	
Turret assembly mass	**2140 kg - 4719 lb**	**2066 kg - 4556 lb**
• Counterweight mass - Turntable	**3905 kg - 8611 lb**	**7200 kg - 15876 lb**
• Battery mass	**22 kg - 49 lb**	
Boom assembly mass	**1000 kg - 2205 lb**	**1550 kg - 3418 lb**
Arm assembly mass	**456 Kg**	**540 Kg**
Jib assembly mass	**154 kg - 340 lb**	
Platform assembly mass	**152 kg - 335 lb**	

3 - Acoustics and vibrations

The acoustics and vibrations specifications are based upon the following conditions :

- The airborne noise emissions at workstation are determined per European Directive 2006/42/CE.
- The guaranteed sound power level LWA (displayed on the product) is determined per European Directive 2000/14/CE.
- The vibrations transmitted by the machinery to the hand/arm system and to the whole body are determined per European Directive 2006/42/CE.

Specifications	
Sound pressure level at workstation	74 dBA
Guaranteed sound power level	108 dBA
Vibrations hand/arm	Vibration transmitted by this MEWP to the hand-arm does not exceed 2,5 m/s²(98,4 in/s²)
Vibrations whole body	Vibration transmitted by this MEWP to the whole body does not exceed 0,5 m/s²(19,6 in/s²)

4 - Wheel/Tire assembly

4.1 - TECHNICAL SPECIFICATIONS

Component	Standard wheel
Reference number	"solideal 385 x 65 x 22,5"
Type	Standard foam
Size	1050 mm /370 mm (42 in/ 15 in)
Torque	320 N.m (236 lbf.ft)

4.2 - INSPECTION AND MAINTENANCE

Replace the wheels and the tires/tyres if any of the following conditions exist :

- Presence of cracks, damage, deformation or other faults on the hub
- Damage to the tire :
- Cut or hole > 3 cm (2 in) in the rubber side wall.
- Blister or pronounced lump on the external and lateral wall.
- Damaged wheel stud.
- Damage or wear on the side wall to the extent that the reinforcing wire is visible.
- Consistent wear of the ground contact surface greater than 25%

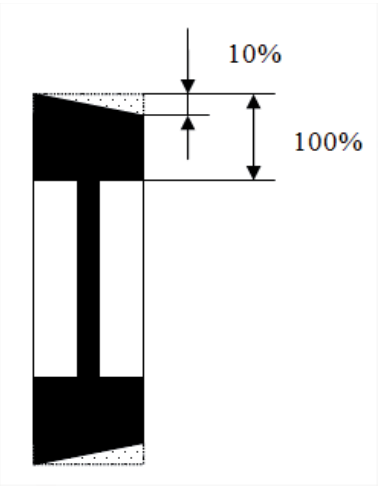

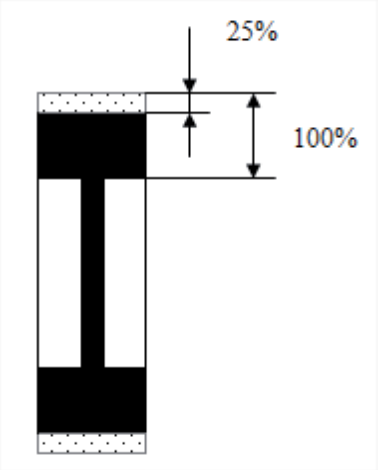

Tires and rims are critical components for the stability of the machine. For safety reasons :

- **Use only HAULOTTE® spare parts according to the technical characteristics of the machine. Refer to the spare parts catalog.**
- **Do not replace factory-installed tires with tires of different specifications or ply rating.**
- **Never replace foam filled tire with a pneumatic (air filled) tire.**

Procedure of replacement :

- Loosen the wheel nuts on the wheel to be removed.
- Raise the machine using a jack or a hoist.
- Remove the wheel nuts.
- Remove the wheel.
- Install the new wheel.
- Lower the machine to the ground.
- Tighten the wheel nuts to the recommended torque Refer to maintenance and repair manuals.

***N.B.**-:-If a wheel has been replaced, while observing the axle track pattern check for correct installation.*

5 - Options

5.1 - ON-BOARD GENERATOR

5.1.1 - Principle

Do not expose the on-board generator to direct contact with a water beam or a high pressure cleaner.

5.1.2 - Procedure

Put into service :

1. Start the machine. Heat the engine for 15 mn before any operation.
2. Set the switch selector, above the socket power, to (1) . The green light comes on indicating the on-board generator start-up.
3. Connect the tool to the socket.
4. You can change the tool at any time.

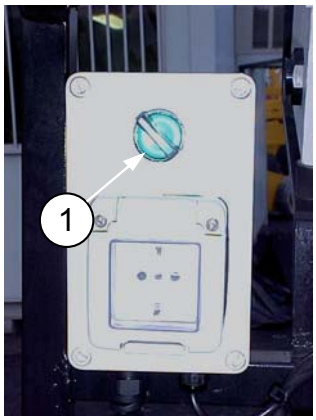

N.B.-:-*When using the on-board generator, you cannot make any machine movements. To make a movement, you must switch off the on-board generator.*

Power off :

5. Disconnect the tool from the socket.
6. Set the switch selector, above the socket power, to OFF. The green light is turned off.
7. Machine movements are once again functional.

5.2 - ACTIV' SHIELD BAR - SECONDARY GUARDING SYSTEM

5.2.1 - Description

Activ' Shield Bar is a secondary guarding device.

It should be noted that this device doesn't release the operator from the responsibilities of learning and practicing the principles of safe machine operations provided by the manufacturer's instructions, employer's safety rules and worksite regulations.

5.2.2 - Characteristics

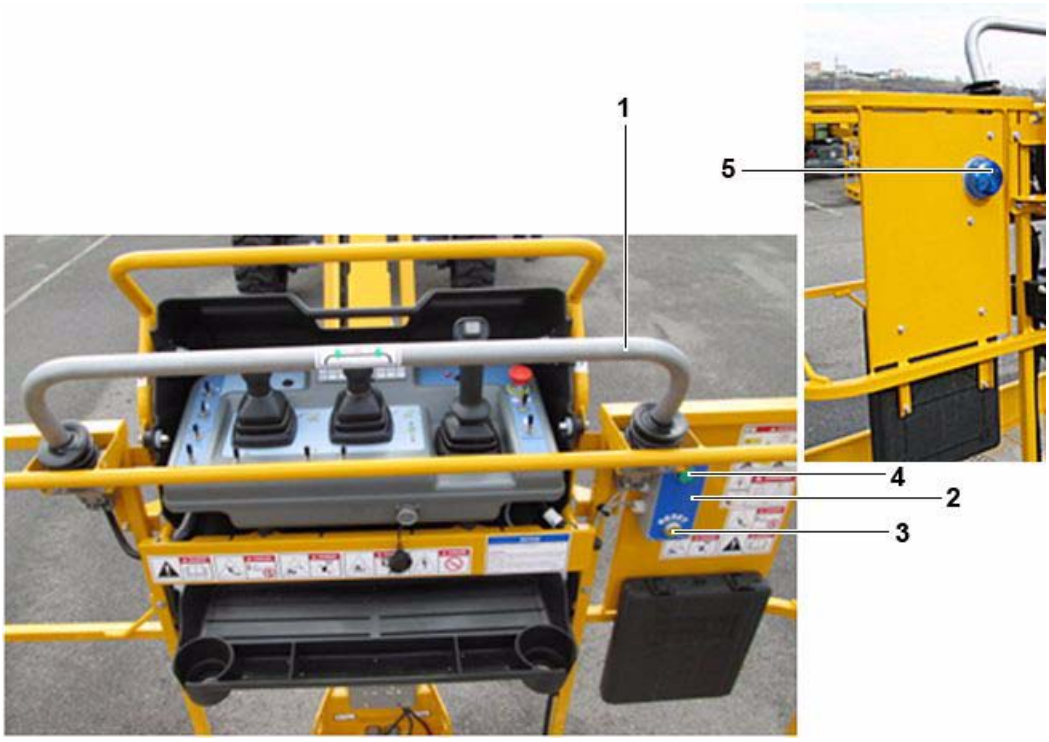

Marking	Description
1	Activation bar
2	Electrical box
3	RESET push-button
4	Green indicator, the system is switched on
5	Blue flashing indicator, indicates activation bar operates

5.2.3 - Safety precautions

- Check the work area for overhead clearances, obstructions or other possible hazards.

- When driving, position the platform so as to provide the best visibility possible and avoid any blind spots.

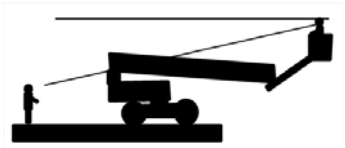

- Always ensure that the chassis is never driven any closer than 1 m (3 ft3 in) from holes, bumps, tilts, obstructions, debris and ground coverings that may hide dangers.
- During operation, keep all the parts of the body inside the platform.
- To position the machine close to obstacles, it is recommended to use boom movements (arm, boom, etc.) instead of the drive movements.
- Do not drive fast in narrow or cluttered areas. Keep speed under control while making turns or sharp bends.

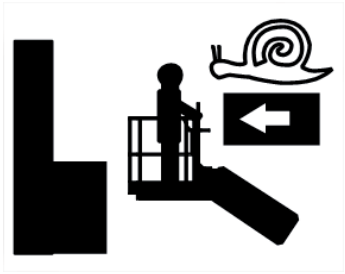

- Do not use the Activ' Shield Bar as a handhold. To prevent unintentional activation of the system.

5.2.4 - Pre-operation inspection

- **If any item on the checklist is marked NO during the inspection; machine must be tagged and locked out and placed out of service.**
- **DO NOT operate the machine until all identified items are corrected and it has been declared safe for operation.**

Description	Yes	No
Perform all specified machine functional tests		
• All machine functional tests result positive		
Start the machine from platform control box		
Switch OFF all emergency push button		
• Check absence of warning signal		
• Check that the green indicator of the electrical box is switched on		
Performs the secondary guarding system tests for each movement specified in the table hereinbelow		
• Push the switch bar while operating the specified movement		
• Check what movement are authorized and complete the table		
• Check that visual and audible warning are activated		
• Check that the reset button of the electrical box is illuminated		
• Push the reset button		
• Check that normal operation is restored		

E - General Specifications

		Operated movement when the bar is triggered																	
		Driving						Turntable rotation						Lifting or telescope extension			Other movement		
		Forward			Reverse			Left			Right								
			Yes	No		Yes	No		Yes	No		Yes	No		Yes	No		Yes	No
Platform control box	Forward																		
	Reverse																		
	Turntable left																		
	Turntable right																		
	Lifting or telescope extension																		
	Telescope descent or retraction																		
	Other movement																		
Ground control box	All	N/A			N/A														

	Authorized
	Prohibited
	Authorized if all switches / joysticks of the Platform control box are in neutral position or, if the Enable switch has been released

5.2.5 - Operation

When the switch bar is triggered, the currently active function movement is stopped. Alarm and flashing light are activated. Only safeguard functional movements (lowering, retracting or reverse movement of the function that created the situation) are available from the platform control box.

Normal operation is restored when the "Reset" button on the right hand side of the basket is pressed in or until the power supply is switched off.

Visual and audible warnings will alert personal at ground if rescue is necessary.

To operate safeguard movement from platform control box :

- Joystick and/or switch must be reset to neutral position (function inactive).
- Enable switch must be activated.
- Operate safeguard movement using joystick or switch to move away from the hazard that triggered the device.
- Press the yellow Reset button to restore normal operation of the machine
- All movements can be operated from the ground control box even if the secondary guarding bar is triggered.

***N.B.**-:-Any modification made to the factory settings (e.g. increasing movement speed and/or ramps) via the console will increase stopping distances after system activation and thereby reduces level of security.*

5.3 - SPECIFIC DECALS

Location of the decals

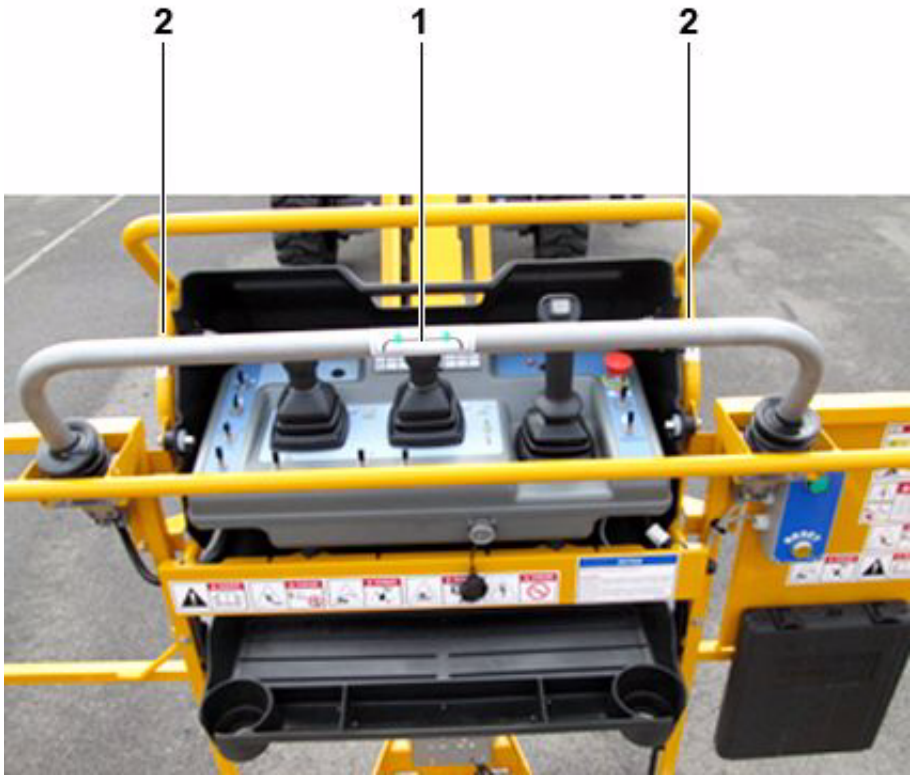

Marking	Description	Quantity	Part number
1	Do not lean on the bar	1	4000206690
2	Hand crushing hazard	2	4000244570

Notes

1 - General

As an owner and/or operator of Haulotte equipment, your Safety is of utmost importance to HAULOTTE® , which is why HAULOTTE® places such a high priority on product safety.

INSPECTIONS are not only required by HAULOTTE®, but may also be required by industry standards and/or governmental regulations.

To ensure that your equipment continues to perform to the factory set performance levels, it is important that you regularly maintain your equipment and avoid making any modifications that are not approved by HAULOTTE®. Regular and timely inspections will reduce equipment down time as well as prevent possible injury.

> ***N.B.***-:-*DO NOT OPERATE unless you are familiar and trained in the principles of safe machine operation.*

Overview :

- Walk-around inspections take only a few minutes at the beginning and end of each shift – one of the best ways to prevent mechanical problems and safety hazards.

What to Do :

- Use your senses: sight, smell, hearing and touch.

Frequency :

- Check your machine periodically during your entire workday.
- Make sure to do your inspection the same way every time.
- Complete one of these inspections at the start and end of each shift.

> ***N.B.***-:-*If damage or unauthorized modifications are discovered, the machine must be removed from service until repairs are made by a qualified service technician.*

It is the owner's responsibility to ensure the required maintenance as recommended by Haulotte is completed prior to the operation of the machine.

If regular maintenance is not carried out, this may :

- Void the warranty.
- Cause machine malfunction.
- Reduce machine reliability and shorten its service life.
- Jeopardize operator safety.

HAULOTTE Services® technicians are specially trained to carry out extensive repairs, interventions or adjustments on the safety systems or elements of HAULOTTE® machines. They carry genuine HAULOTTE spare parts and tools as required, and also provide fully documented reports on all work completed.

The inspection and maintenance table, identifies the role and the responsibilities of each party in periodical machine maintenance. Section C 4Inspection and Functional test.

2 - Maintenance Schedule

This section provides the necessary information needed to place the machine in safe operation. For maximum service life and safe operation, ensure that all the necessary inspections and maintenance have been completed. There are a number of factors which can affect the design life including but not limited to, severity of operating conditions/routine maintenance which should be carried out in accordance with this manual.

Severity of operating conditions may require a reduction in time between maintenance periods. Machines that have been out of service for more than 3 months must undergo a periodic inspection before the machine is put back into service.

Maintenance must be carried out by a competent company or person familiar with mechanical procedures.

Maintenance operations performed must be recorded in a register / log book of the machine.

3 - Inspection program

3.1 - GENERAL PROGRAM

The machine must be inspected on a regular basis at intervals of no less than once 1 per year. The purpose of the inspection is to detect any defect which could lead to an accident during routine use of the machine. Local standards and regulations may require more frequent inspections.

HAULOTTE® requires Reinforced and Major Inspections to be carried out on the product to extend its service life.

Inspections must be carried out by a competent company or person.

The inspection results must be recorded in the safety register or machine log book controlled and overseen by the company manager. This register or machine log book and the list of competent repair persons must be made available to the government work inspector and HAULOTTE Services®.

When	Responsible	Stakeholder	What
Before sale	Owner (or renter)	Competent technician or qualified technician HAULOTTE Services®	Periodic inspection
Before rent	Owner (or renter)	Competent technician or qualified technician HAULOTTE Services®	Daily inspection
Before use or every change of user	User	User	
Annually (1 year)	Owner (or renter)	Competent technician or qualified technician HAULOTTE Services®	Periodic inspection
5 years	Owner (or renter)	Qualified technician HAULOTTE Services®	Reinforced inspection
10 years	Owner (or renter)	Qualified technician HAULOTTE Services®	Major inspection

3.2 - DAILY INSPECTION

The Daily inspection includes a visual inspection, operational checks and testing of the safety systems. This must be conducted by the operator before using the machine.

This inspection is the responsibility of the user.

Refer to Section C for Daily inspection procedures..

3.3 - PERIODIC INSPECTION

The Periodic inspection is a thorough evaluation of the operation and safety features of the machine.

It must be conducted before the sale / resale of the machine and/or at least once 1every year.

Local regulations may have specific requirements on frequency, and content of inspections.

The severity of operating conditions may require frequent inspections.

This inspection is the responsibility of the owner, and inspections must be carried out by a competent company or person.

This inspection is in addition to the daily inspection.

This inspection should also be conducted after :

- Extensive dismantling and reassembly of major components.
- Repairs involving the machine's essential components.
- Any accident causing stress to the machine.

3.4 - REINFORCED INSPECTION

The Reinforced inspection is a thorough evaluation of the machine's structural components, to ensure proper functionality of the machine.

This evaluation must occur at a frequency of 5000 hours or every 5 years.

This inspection is the responsibility of the owner, and it must be conducted by a HAULOTTE Services® technician or by a competent company or person.

This inspection includes :

- Daily inspection
- Periodic inspection

***N.B.**-:-Refer to the Maintenance manual for details.*

3.5 - MAJOR INSPECTION

The Major inspection is a thorough evaluation of the machine's integrity and proper functioning; after a standard/normal working life of 10 years.

This evaluation must take place after 10 years of operation and then repeated every 5 years thereafter.

The severity of operating conditions may require frequent inspections.

This inspection is the responsibility of the owner, and it must be conducted by a HAULOTTE Services® technician.

This inspection includes :

- Daily inspection
- Periodic inspection
- Reinforced inspection

***N.B.**-:-Refer to the Maintenance manual for details.*

4 - Repairs and adjustments

Extensive repairs, interventions or adjustments on the safety systems or components must be performed by a HAULOTTE Services® technician. Use original spare parts and components only.

> ***N.B.***-:-*HAULOTTE Services® technicians are trained professionals to perform extensive repairs, interventions and adjustments on the safety systems or components of HAULOTTE® machines. The technician carries genuine HAULOTTE® spare parts and tools as required, and also provides fully documented reports on all work completed.*

HAULOTTE Services® will not take responsibility for any outcomes resulting from inferior services or repairs performed by other unauthorised personnel.

HAULOTTE® reminds that NO modifications SHALL be carried out without the written permission of HAULOTTE®.

Any unauthorised repairs/modifications will void HAULOTTE® warranty.

With the utmost care to ensure enhanced reliability and greater safety of the HAULOTTE® products, it is pertinent that when a "Service or Safety Bulletin" is issued, action is taken immediately. Once the bulletin has been addressed, make sure that the completed form is submitted to HAULOTTE®.

> ***N.B.***-:-*When disposing or scrapping this machine, please consider appropriate methods of recycling. Any items that require specific disposal are listed with instructions in the maintenance manual.*

Notes

1 - Warranty disclosure

1.1 - AFTER SALES SERVICE

Our HAULOTTE Services® After Sales Service is at your disposal throughout your machine's service life to ensure the optimum use of your HAULOTTE product :

- When contacting our After Sales Service, ensure that you provide the machine model and serial number.
- When ordering any consumables or spare parts, please use this manual and the HAULOTTE® Essential catalogue to receive your genuine HAULOTTE® spare parts, your only guarantee of parts interchangeability and correct machine operation.
- If there is an equipment malfunction involving a HAULOTTE® product, then contact HAULOTTE Services® immediately even if the malfunction does not involve material and/or bodily damage.

1.2 - MANUFACTURER'S WARRANTY

1.2.1 - Warranty acceptance

On reception of his machine, the owner or rental company must check the machine's condition and fill out the machine reception slip provided.

1.2.2 - Warranty period

The present warranty is valid for a period of 12 months or up to a maximum of 1000 operating hours for lifting and handling equipment and 2000 operating hours for public works machinery, starting from delivery and terminating when the first limit is reached.

Spare parts are covered by a 6 month warranty.

1.2.3 - Procedure conditions

To benefit from the warranty, the owner or rental company must inform the nearest HAULOTTE® subsidiary or the subsidiary that delivered the machine (the only dealer authorised to carry out an intervention under the manufacturer's warranty agreement) of the defect in writing as quickly as possible.

The subsidiary will decide whether to repair or replace the part that proves to be faulty.

The owner or rental company must present the duly completed maintenance book supplied with the machine as proof that the maintenance operations recommended by the manufacturer have been carried out.

The owner or rental company must ensure that the defect covered by the HAULOTTE® warranty is reported to and acknowledged by the HAULOTTE® subsidiary as rapidly as possible or must report the defect in writing.

Work carried out under the HAULOTTE® warranty will be performed by the subsidiary which delivered the machine, wherever possible.

1.2.4 - Conditions of warranty

HAULOTTE® guarantees its products against defects, faults or manufacturing defects when the owner or rental company has informed HAULOTTE® of the defect.

The warranty does not cover the consequences of normal wear, nor any defects, failure or damage resulting from poor maintenance or abnormal usage, in particular overloading, impact by an external source, faulty installation or any modification made to products marketed by HAULOTTE® and performed by the owner or rental company.

In the event of operation or use which does not comply with the instructions or recommendations in the maintenance book, warranty claims will not be accepted.

The machine utilisation period must be recorded by reading the engine hour meter whenever an intervention is made. The engine hour meter must be maintained in good working order to guarantee maximum working life and to justify maintenance at the recommended time.

Warranty obligations for the time period stated above will cease immediately in situations where the defect is due to the following reasons :

- Use of spare parts that are not HAULOTTE® originals.
- If elements or products other than those recommended by the manufacturer are used.
- If the HAULOTTE® name, serial numbers or identification marks are removed or altered.
- After an unreasonably long delay before reporting a manufacturing problem.
- If the owner or rental company continues to use the machine despite problems.
- If damage is caused by modifications that do not comply with HAULOTTE® specifications.
- If lubricants, hydraulic oils or fuels that do not comply with HAULOTTE® recommendations are used.
- If the machine is incorrectly repaired or used by the customer.
- In case of an accident caused by a third party.

If no particular agreement has been made, any claims made after the previously established warranty period has expired will be refused.

G - Other information

The present warranty does not cover damage that may result directly or indirectly from any flaws or defects covered by the latter :

- Consumables : No claims will be accepted for objects or parts replaced in the context of normal machine usage.
- Settings : Adjustments of all sorts may become necessary at any time. Therefore adjustments are considered a part of normal machine usage conditions and are not covered by the warranty.
- Hydraulic and fuel circuit contamination : Every possible precaution is taken to ensure that fuel and hydraulic liquid delivered is clean. HAULOTTE® will not accept any claims concerning cleaning of the fuel circuit, filter, injection pump or any other equipment in direct contact with fuel or lubricants.
- Wearing parts (pads, bearings, tires/tyres, connections, etc.) : These parts are, by definition, subject to deterioration during the period of operation. Wearing parts will therefore not be covered by the warranty agreement.

2 - Subsidiary contact information

	HAULOTTE FRANCE PARC DES LUMIERES 601 RUE NICEPHORE NIEPCE 69800 SAINT-PRIEST **TECHNICAL Department:** **+33 (0)820 200 089** **SPARE PARTS : +33 (0)820 205 344** FAX : +33 (0)4 72 88 01 43 E-mail : haulottefrance@haulotte.com www.haulotte.fr		HAULOTTE ITALIA VIA LOMBARDIA 15 20098 SAN GIULIANO MILANESE (MI) **TEL: +39 02 98 97 01** FAX: +39 02 9897 01 25 E-mail : haulotteitalia@haulotte.com www.haulotte.it		HAULOTTE INDIA Unit No. 1205, 12th foor,Bhumiraj Costarica, Plot No. 1&2, Sector 18, Palm Beach Road, Sanpada, Navi Mumbai- 400 705 Maharashtra, INDIA Tel. : +91 22 66739531 to 35 E-mail : sray@haulotte.com www.haulotte.in
	HAULOTTE HUBARBEITSBÜHNEN GmbH Ehrenkirchener Strasse 2 D-79427 ESCHBACH **TEL : +49 (0) 7634 50 67 - 0** FAX : +49 (0) 7634 50 67 - 119 E.mail : haulotte@de.haulotte.com www.haulotte.de		HAULOTTE VOSTOK 35, SVOBODY STREET Bldg. 19 125362 MOSCOW RUSSIA **TEL/FAX : +7 495 221 53 02 / 03** E.mail : info@haulottevostok.ru www.haulotte-international.com		HAULOTTE DO BRASIL AV. Tucunaré, 790 CEP: 06460-020 – TAMBORE BARUERI – SAO PAULO – BRASIL **TEL : +55 11 4196 4300** FAX : +55 11 4196 4316 E.mail : haulotte@haulotte.com.br www.haulotte.com.br
	HAULOTTE IBERICA C/ARGENTINA N° 13 - P.I. LA GARENA 28806 ALCALA DE HENARES MADRID **TEL : +34 902 886 455** TEL SAT : +34 902 886 444 FAX : +34 911 341 844 E.mail : iberica@haulotte.com www.haulotte.es		HAULOTTE POLSKA Sp. Z.o.o. UL. GRANICZNA 22 05-090 RASZYN - JANKI **TEL : +48 22 720 08 80** FAX : +48 22 720 35 06 E-mail : haulottepolska@haulotte.com www.haulotte.pl		HAULOTTE MÉXICO, Sa de Cv Calle 9 Este, Lote 18, Civac, Jiutepec, Morelos CP 62500 Cuernavaca México **TEL : +52 77 7321 7923** FAX : +52 77 7516 8234 E-mail : haulotte.mexico@haulotte.com www.haulotte-international.com
	HAULOTTE PORTUGAL ESTRADA NACIONAL NUM. 10 KM. 140 - LETRA K 2695 - 066 BOBADELA LRS **TEL : + 351 21 995 98 10** FAX : + 351 21 995 98 19 E.mail : haulotteportugal@haulotte.com www.haulotte.es		HAULOTTE SINGAPORE Pte Ltd. No.26 CHANGI NORTH WAY, SINGAPORE 498812 **Parts and service Hotline:** **+65 6546 6150** FAX : +65 6536 3969 E-mail: haulotteasia@haulotte.com www.haulotte.sg		HAULOTTE MIDDLE EAST FZE PO BOX 293881 Dubaï Airport Free Zone DUBAÏ United Arab Emirates **TEL : +971 (0)4 299 77 35** FAX : +971 (0) 4 299 60 28 E-mail : haulottemiddle- east@haulotte.com www.haulotte-international.com
	HAULOTTE SCANDINAVIA AB Taljegårdsgatan 12 431 53 Mölndal SWEDEN **TEL : +46 31 744 32 90** **FAX : +46 31 744 32 99** E-mail : info@se.haulotte.com spares@se.haulotte.com www.haulotte.se		HAULOTTE TRADING (SHANGHAI) Co. Ltd. #7 WORKSHOP No 191 HUA JIN ROAD MIN HANG DISTRICT SHANGHAI 201108 CHINA **TEL : +86 21 6442 6610** FAX : +86 21 6442 6619 E-mail : haulotteshanghai@haulotte.com www.haulotte.cn		HAULOTTE ARGENTINA Ruta Panamericana Km. 34,300 (Ramal A Escobar) 1615 Gran Bourg (Provincia de Buenos Aires) Argentina **TEL.: +54 33 27 445991** FAX. +54 33 27 452191 E-mail : haulotteargentina@haulotte.com www.haulotte-international.com
	HAULOTTE UK Ltd STAFFORD PARK 6 TELFORD - SHROPSHIRE TF3 3AT **TEL : +44 (0)1952 292753** FAX : + 44 (0)1952 292758 E.mail : salesuk@haulotte.com www.haulotte.co.uk		HAULOTTE GROUP / BILJAX 125 TAYLOR PARKWAY ARCHBOLD, OH 43502 – USA **TEL : +1 419 445 8915** FAX :+1 419 445 0367 Toll free : +1 800 537 0540 E.mail : sales@us.haulotte.com www.haulotte-usa.com		HAULOTTE GROUP 1301 E PATRICK STREET FREDERICK, MD 21701 – USA **TEL : +1 301 663 0852** FAX :+1 301 663 0572 Toll free : +1 800 537 0540 E.mail : sales@us.haulotte.com www.haulotte-usa.com
	HAULOTTE NETHERLANDS BV Koopvaardijweg 26 4906 CV OOSTERHOUT - Nederland **TEL : +31 (0) 162 670 707** FAX : +31 (0) 162 670 710 E.mail info@haulotte.nl		HAULOTTE AUSTRALIA PTY Ltd 46 GREENS ROAD DANDENONG – VIC – 3175 **TEL : 1 300 207 683** FAX : +61 (0)3 9792 1011 E.mail : sales@haulotte.com.au		HAULOTTE CHILE El Arroyo 840 Lampa (9380000) Santiago (RM) **TEL : + 562 2 3727630** E.mail : haulotte-chile@haulotte.com www.haulotte-chile.com

G - Other information

For the engine powered machines destined to the US market (Standards ANSI and CSA)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm

Notes